

# ASSEMBLY INSTRUCTIONS

---

**Playcraft**  
CENTER ICE<sup>®</sup>



**Model: AHCI07**

 











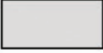

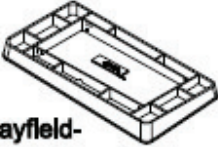




Congratulations on Selecting a Playcraft air hockey table! Playcraft is a leader in the industry providing high quality value priced products. Please contact us toll free at (888) 367-3095 or via email at [support@playcraft.com](mailto:support@playcraft.com) should you require any assistance.

## For Your Safety

 - 1) Please read all safety instructions and directions before assembly. During assembly and while using the table, please consider that the table is heavy and requires at least two people to lift or move
- 2) During the assembly process, after attaching the legs, lift the table to turn it over. Do not roll the table over onto the legs or they could become damaged.
- 3) Only use the table for its intended purpose
- 4) Damaged or worn parts may be dangerous for users and the integrity of the table. Replace worn or damaged components immediately and do not use the table until any issues have been resolved. For best results, use only spare parts supplied by Playcraft.
- 5) Unauthorized repairs or altering the table's design or functions may be dangerous and will void the warranty.
- 6) Check all screws, bolts, etc. on a regular basis to ensure that they are in good working condition and have not loosened over time.
- 7) Your table is designed for use in an indoor, climate controlled environment only. Damage can occur if the table is exposed to water, dampness, high humidity, freezing temperatures, etc.
- 8) Be aware that hard hit air hockey pucks can injure players or bystanders that are close to the table. Please use caution.
- 9) Never spray a cleaner directly onto the playfield. If the playfield needs to be cleaned, use a mild, non-abrasive cleaner applied sparingly to a damp rag and wipe the playfield while the blower is turned on.


## Parts List

 Shaded box = pre-installed part



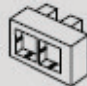
<p><b>#1</b></p>  <p>Playfield-Hockey Table 1 pc</p>	<p><b>#2</b></p>  <p>Left leg 2 pcs</p>	<p><b>#3</b></p>  <p>Right leg 2 pcs</p>	<p><b>#4</b></p>  <p>Leg connect board 4 pcs</p>	<p><b>#5</b></p>  <p>Leg levellers 4 pcs</p>
<p><b>#6</b></p>  <p>5/16\"X42mm Bolts 12 pcs</p>	<p><b>#7</b></p>  <p>T4X1\" Screws 24 pcs</p>	<p><b>#8</b></p>  <p>5/16\" Washers 12 pcs</p>	<p><b>#9</b></p>  <p>Tool 1 pc</p>	<p><b>#10</b></p>  <p>Puck 2 pcs</p>
<p><b>#11</b></p>  <p>Striker 2 pcs</p>	<p><b>#12</b></p>  <p>Felt pad 2 pcs</p>			
<p><b>#31</b></p>  <p>Battery box 1 pc</p>	<p><b>#32</b></p>  <p>Puck catcher wire 2 set</p>	<p><b>#33</b></p>  <p>Led Scoring 1set</p>	<p><b>#34</b></p>  <p>Scorer base box 1 pc</p>	

NOTES


**STEP 1**

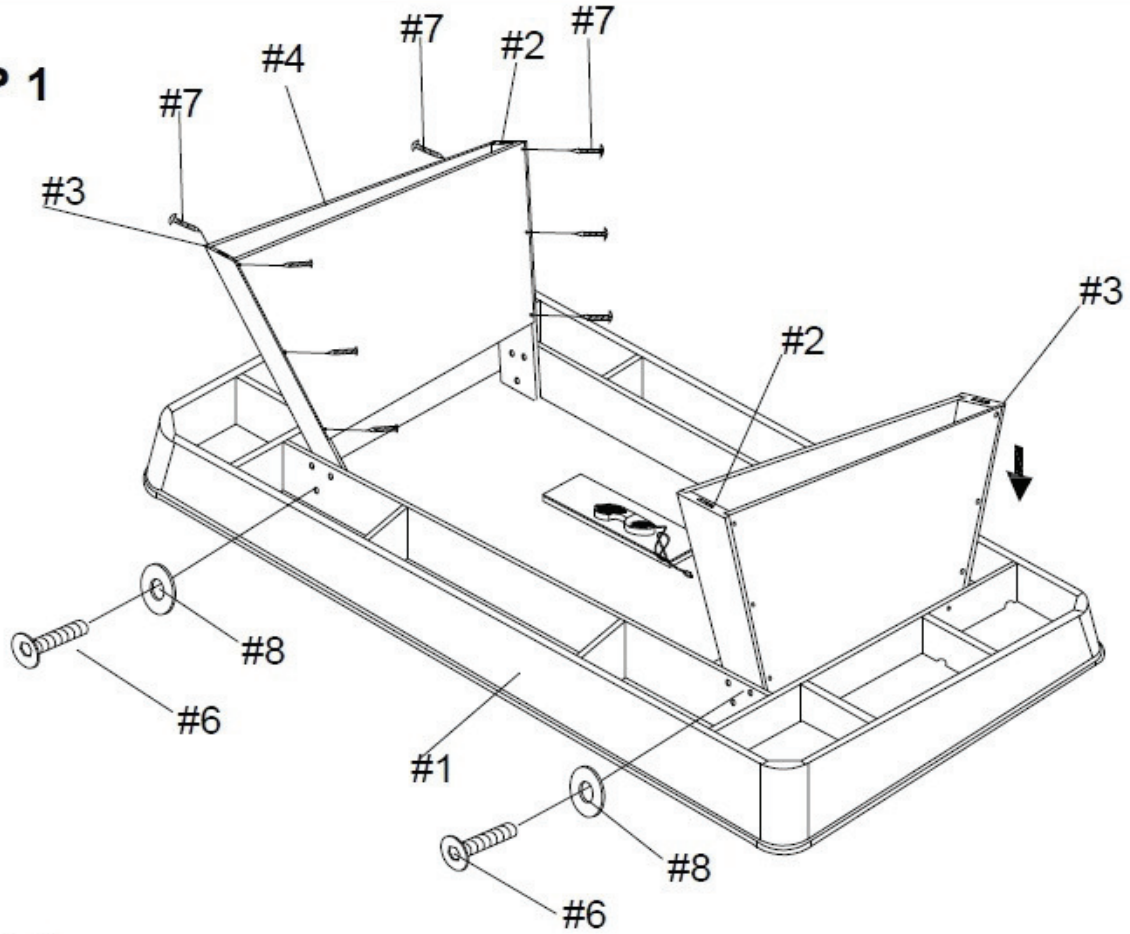

**STEP 2**

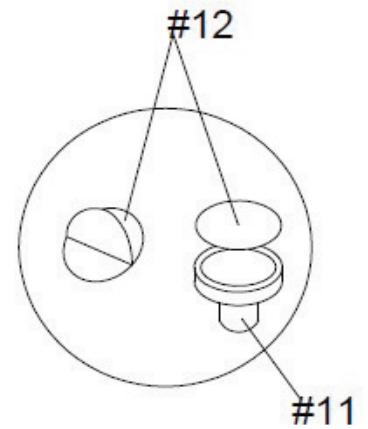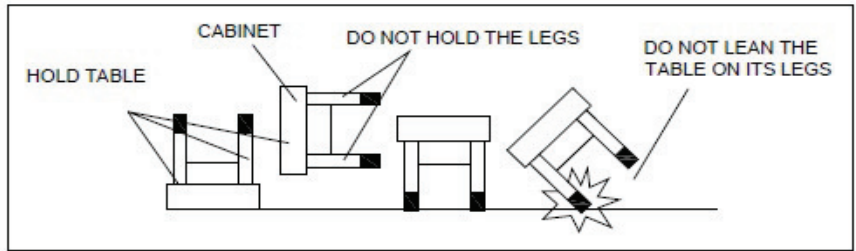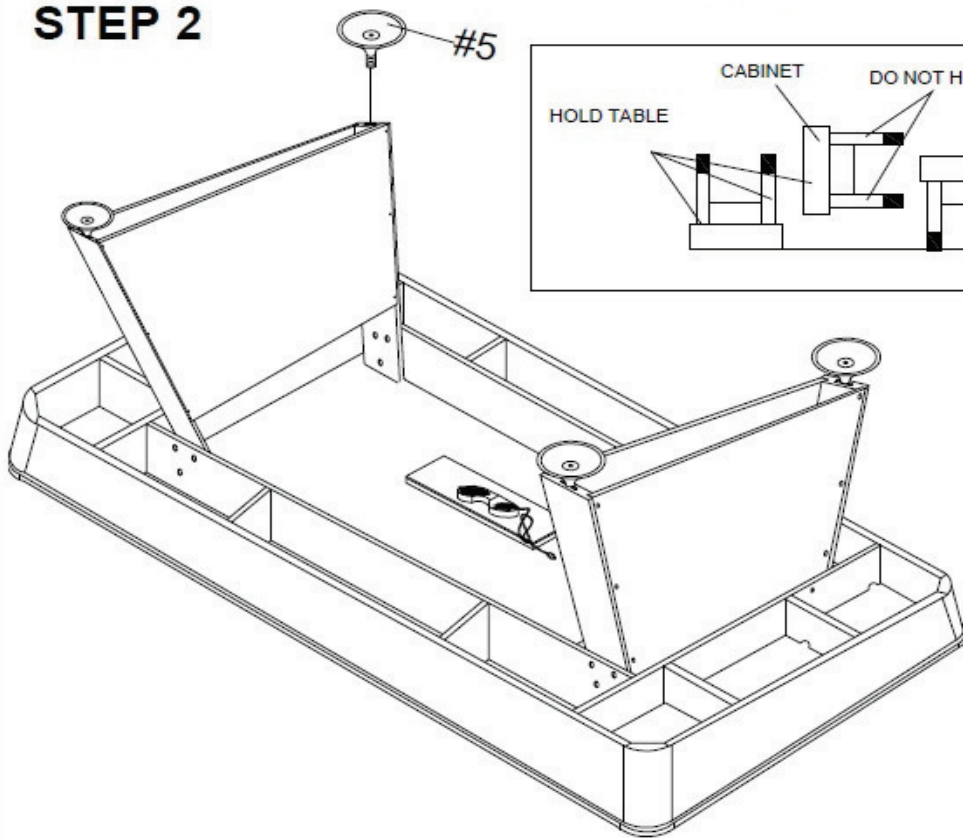

**STEP 3** Connect the wiring under the table following the following diagram

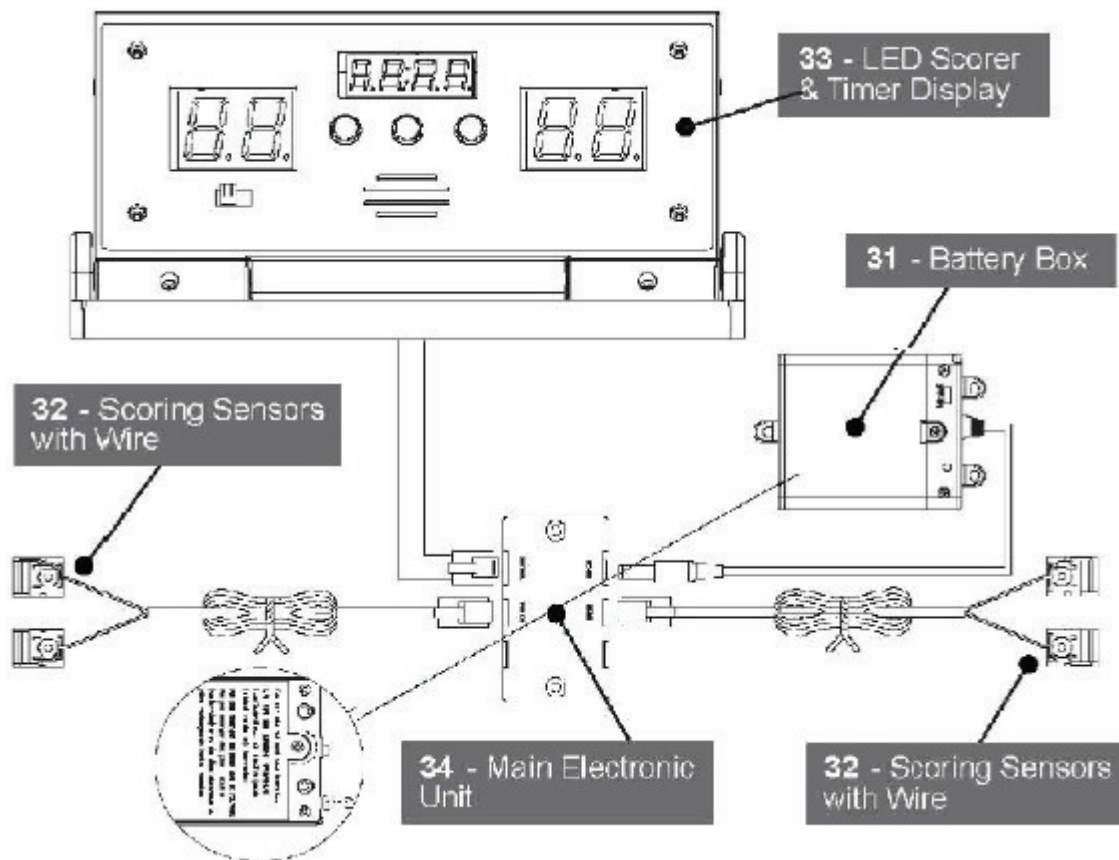

## Electronic Scorer Operation

- 1) Under the table, remove the screw using a small phillips head screwdriver and open the battery box. Insert 4 AA batteries (not included) in the order of plarity as shown on the inside cover. Close the battery box and secure cover with the screw removed earlier. If the game is not used for a long period of time it is recommended to remove the batteries.
- 2) Turn on the scorer using the on/off switch located on the scoring display. You will hear music and the Home and Visitors screens will show " 00 "
- 3) There is one pre-set period of 15 minutes which can be adjusted to 10 minutes, 5 minutes, or " no time limit " mode by pressing the " MINUTES " button.
- 4) Pres the " START / RESET " button to start the game.
- 5) During play, when the " START / RESET " button is pushed the Home and Visitor score will reset to " 00 " and time will reset to its original setting.
- 6) Sound ON / OFF - press this button whiel the game is on to turn the sound ON or OFF.
- 7) Once Home or Visitor reaches " 99 " points scoring will stop and the diplay will keep flashing. To reset the scorer press the " START / RESET " button.



**WARNING!** Do not mix old and new batteries. Do not mix alkaline, standard (carbon - zinc), or rechargeable (nickel cadmium) batteries. Do not dispose of batteries in a fire. Batteries may explode or leak.

**NOTE:** Please clean the battery contacts of the device prior to battery installation. Make sure to remove batteries from the scorer when not being used for an extended period of time. Remove old batteries promptly.

## **Customer Service**

For questions on assembly or for missing or damaged parts, please contact us toll free at (888) 367-3095 or via email at [support@playcraft.com](mailto:support@playcraft.com). Please visit our website at [www.playcraft.com](http://www.playcraft.com) to see more industry leading Playcraft and Playcraft Sport game tables.

**Thank you for choosing Playcraft!**

Global Merchants, Inc.  
12 Lunar Drive  
Woodbridge, CT 06525