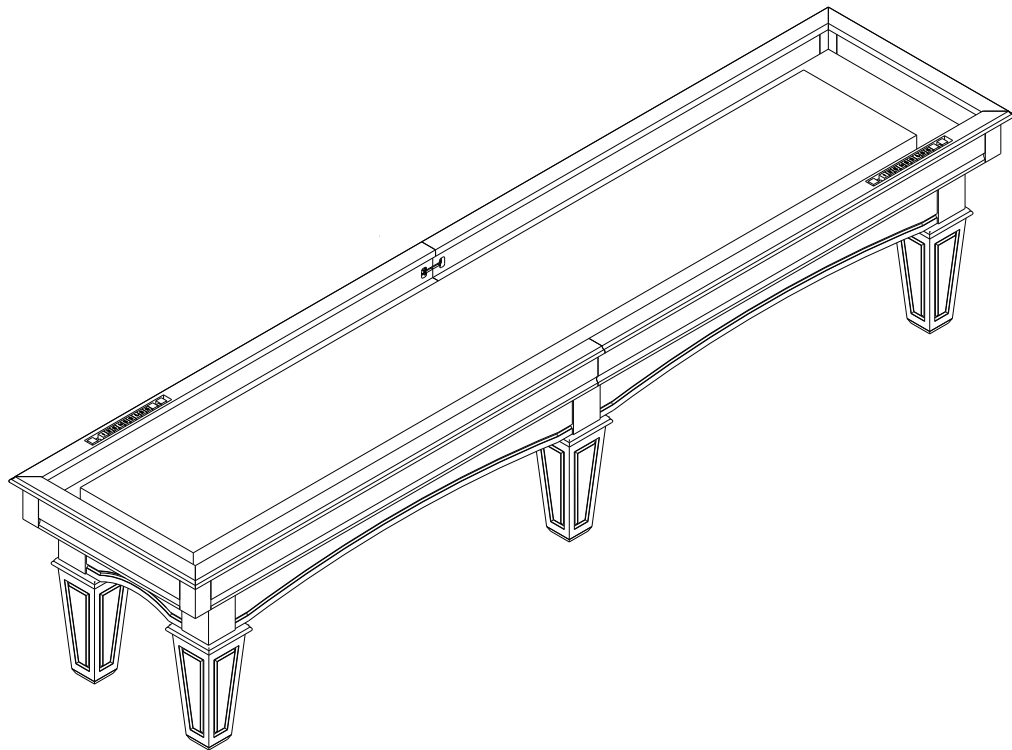


ASSEMBLY INSTRUCTIONS



PLAYCRAFT

BILLIARDS & BOARDS



St. Lawrence / Charles River

Models:

- SHSLRESP - Espresso 16'
- SHSLRCHT - Chestnut 16'
- SHCHRESP - Espresso 16'
- SHCHRCHT - Chestnut 16'



 

 
 
 
 

 


Congratulations on selecting a St. Lawrence or Charles River shuffleboard table - part of the Fairfield Collection by Playcraft. Please contact us toll free at (888) 367-3095 or via email at support@playcraft.com should you require any assistance.

Please carefully read all safety instructions and directions before proceeding

- 1) Your table is designed for use indoors in a climate controlled environment only. Damage can occur if the table is exposed to water, dampness, high humidity, freezing temperatures, etc.
- 2) The shuffleboard cradle and playfield are extremely heavy. Two or more people are required for assembly.
- 3) The table must be assembled in the final location where the table will be played. Attempting to move the table once assembled could result in damage to the table or serious injury.
- 5) Only use the table for its intended purpose
- 6) Damaged or worn parts may be dangerous for users and the integrity of the table. Replace worn or damaged components immediately and do not use the table until any issues have been resolved. For best results, use only spare parts supplied by Playcraft.
- 7) Unauthorized repairs or altering the table's design or functions may be dangerous and will void the warranty.
- 8) Check all screws, bolts, etc. on a regular basis to ensure that they are in good working condition and have not loosened over time.
- 9) Over time, shuffleboard table cradles may require leveling and the playfield climatic adjusters may require adjusting. This is considered normal maintenance as required with owning a shuffleboard table

The part images shown below may differ based on the specific model within the Fairfield Collection by Playcraft that you purchased. The assembly process is the same for all models in the Collection.

| Parts List - cradle components | | | | |
|--------------------------------|--------|---|------------------------------|-----|
| | PART # | IMAGE | DESCRIPTION | QTY |
| LEGS | 1 |  | CORNER LEG | 4 |
| | 2 |  | MIDDLE LEG | 2 |
| | 3 |  | CORNER LEG BRACKET | 4 |
| | 4 |  | MIDDLE LEG BRACKET | 2 |
| CRADLE | 5 |  | SIDE PANEL | 4 |
| | 6 |  | END PANEL | 2 |
| | 7 |  | LONG CROSS BEAM | 4 |
| | 8 |  | SHORT CROSS BEAM | 1 |
| | 9 |  | PLAYFIELD | 1 |
| | 10 |  | CRADLE | 2 |
| PLAYING EQUIPMENT | 11 | | WEIGHT SET 4 BLUE & 4 RED | 1 |
| | 12 | | GRANULAR SPEED WAX | 1 |
| | 13 | | BOARD SWEEP | 1 |



 














| Parts List - hardware | | | | |
|-----------------------|--------|---|--|-----|
| | PART # | IMAGE | DESCRIPTION | QTY |
| LEGS | H1 |  | HEX HEAD CROSS BOLT 3/8" X 3-1/8"(M10X80mm) | 6 |
| | H2 |  | FLAT WASHER 3/8" I.D. | 6 |
| | H3 |  | HEX HEAD CROSS BOLT 5/16" X 1 "(M8X25mm) | 24 |
| | H4 |  | FLAT WASHER 5/16" I.D. | 24 |
| CRADLE | H5 |  | HEX HEAD CROSS BOLT 5/16" x 2"(M8X51mm) | 6 |
| | H6 |  | FLAT WASHER 5/16" I.D. | 6 |
| | H7 |  | HEX HEAD CROSS BOLT 3/8" X 1-1/4"(M10X30mm) | 8 |
| | H8 |  | FLAT WASHER 5/16" I.D. | 8 |
| | H9 |  | STUD BOLT 5/16" X 5-1/2"(M8X140mm) | 2 |
| | H10 |  | FLAT WASHER 5/16" I.D. | 4 |
| | H11 |  | HEX NUT 5/16" I.D. | 4 |
| | H12 |  | CLIMATIC ADJUSTERS | 6 |
| | H13 |  | HEX HEAD BOLT 3/8" X 4-3/4"(M10X 120mm) | 6 |
| | H14 |  | FLAT WASHER 3/8" I.D. | 6 |
| | H15 |  | HEX NUT 3/8" I.D. | 6 |
| | H16 |  | HEX HEAD CROSS BOLT 3/8" X 3-1/8"(M10 X 80mm) | 12 |
| | H17 |  | FLAT WASHER 3/8" I.D. | 12 |

  FIG.1

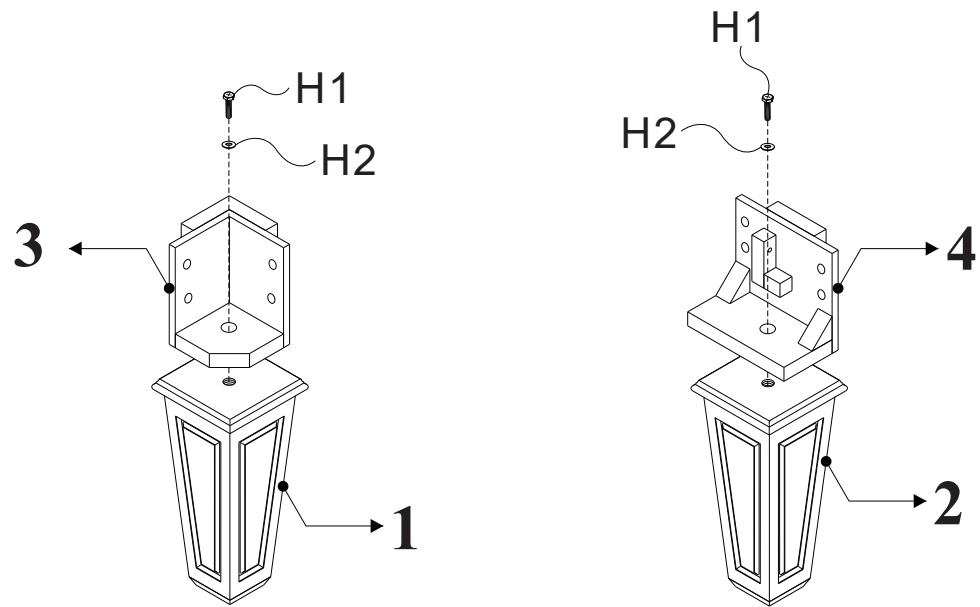


FIG.2

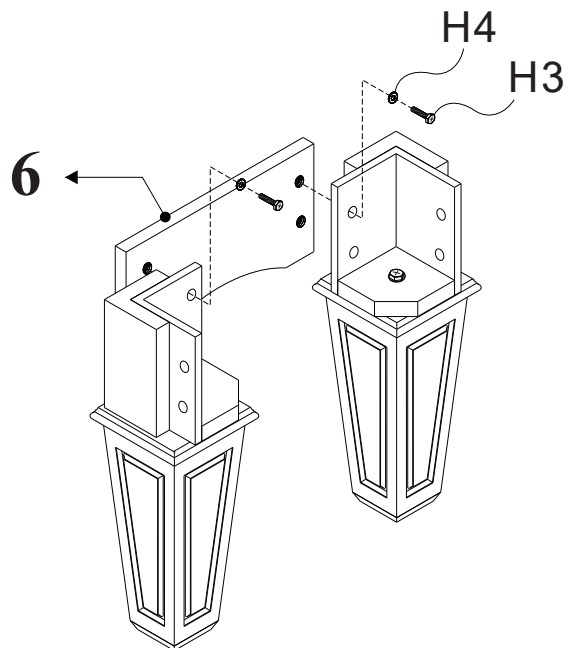


FIG.3

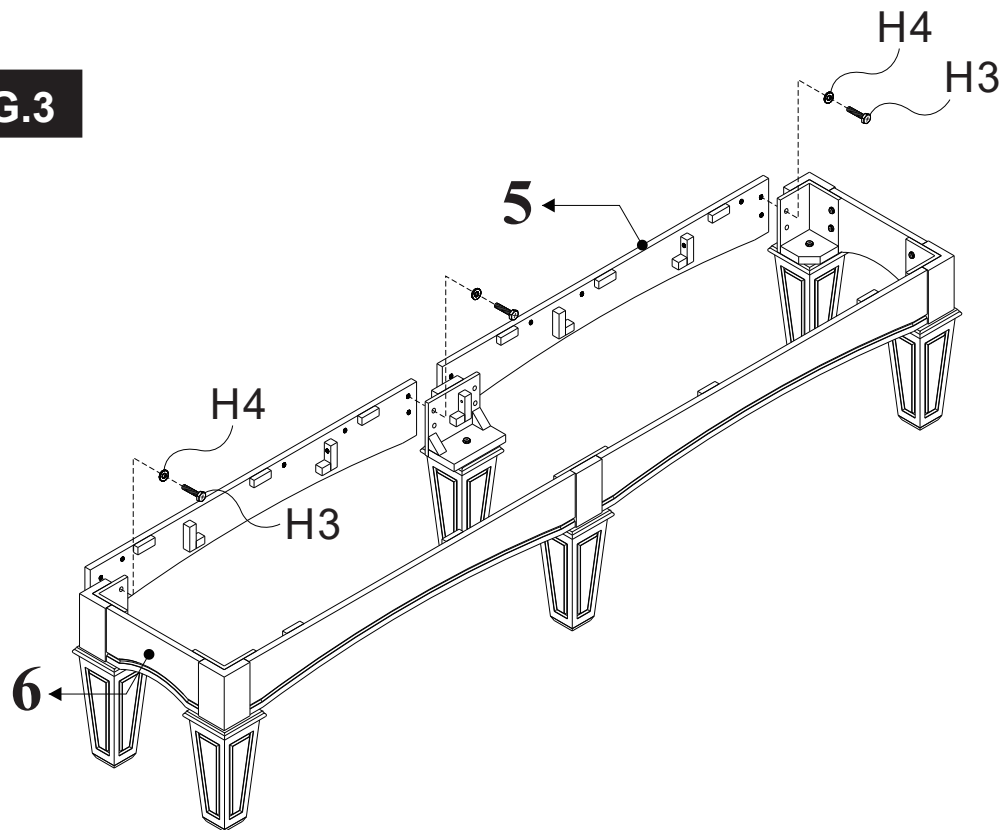


FIG.4

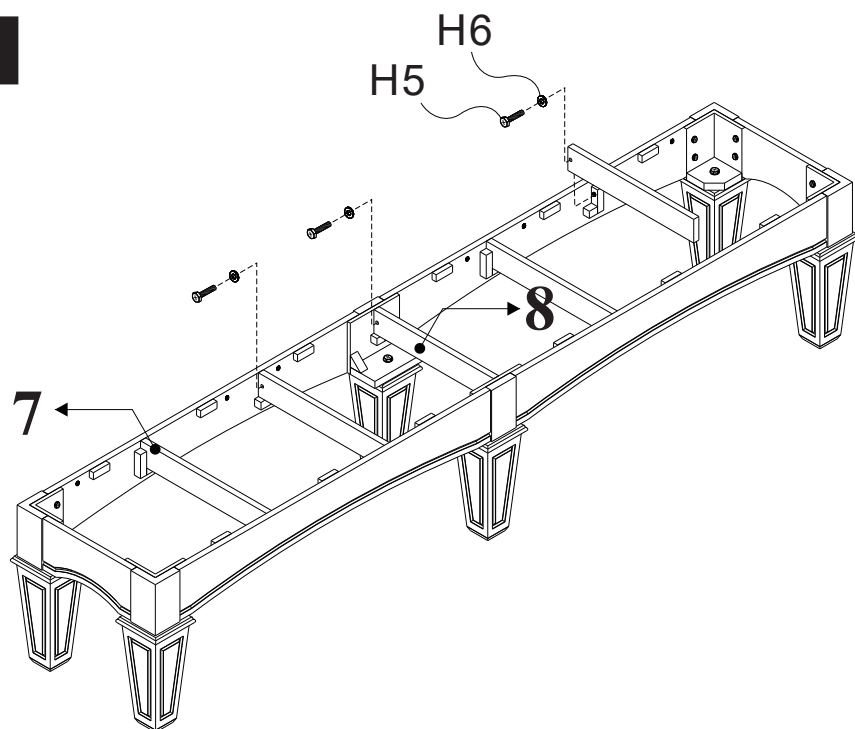


FIG.5

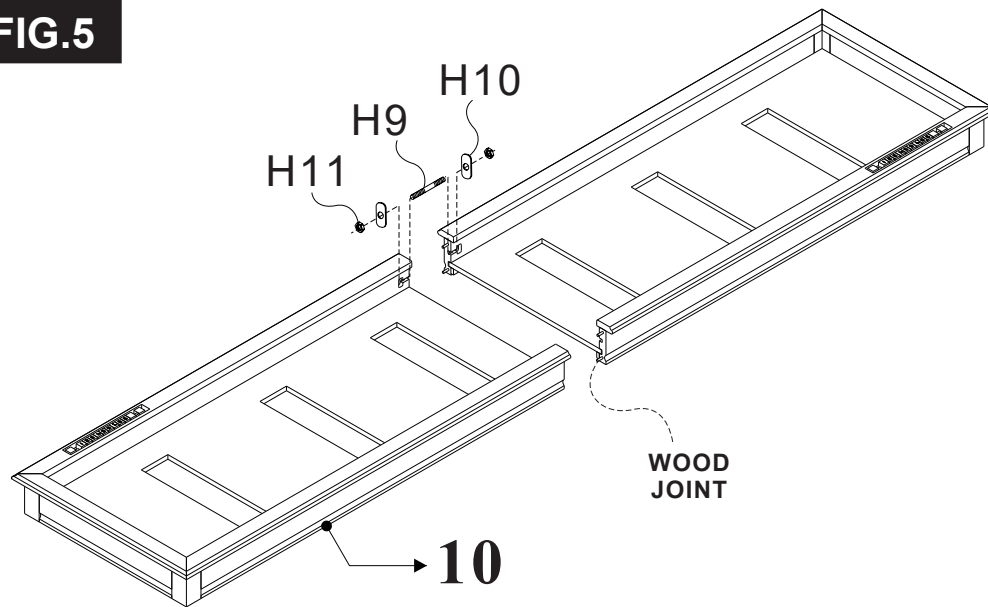


FIG.6

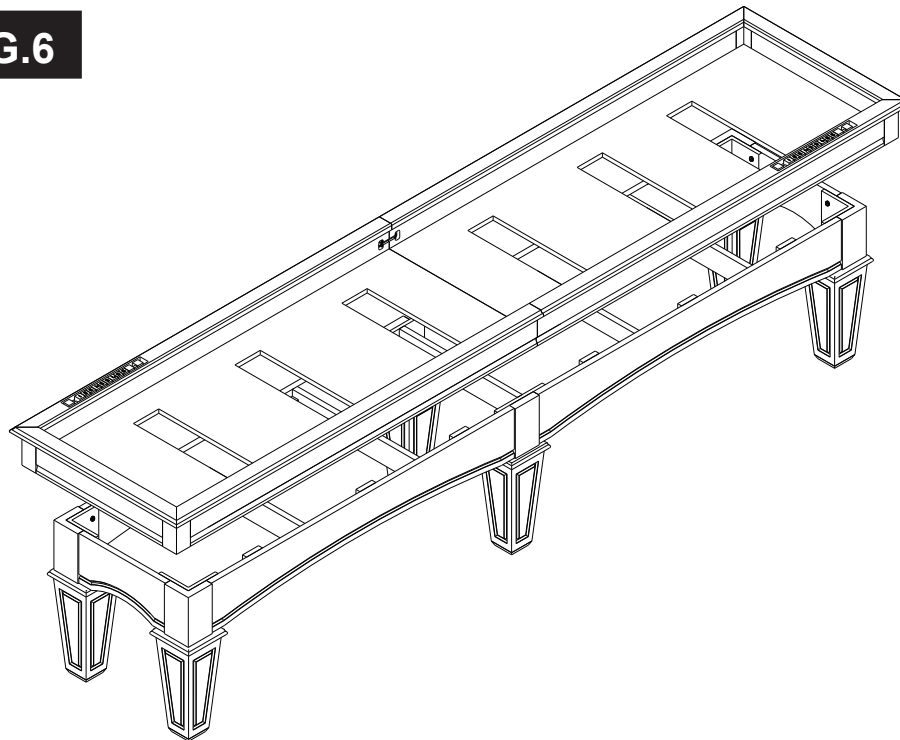


FIG.7

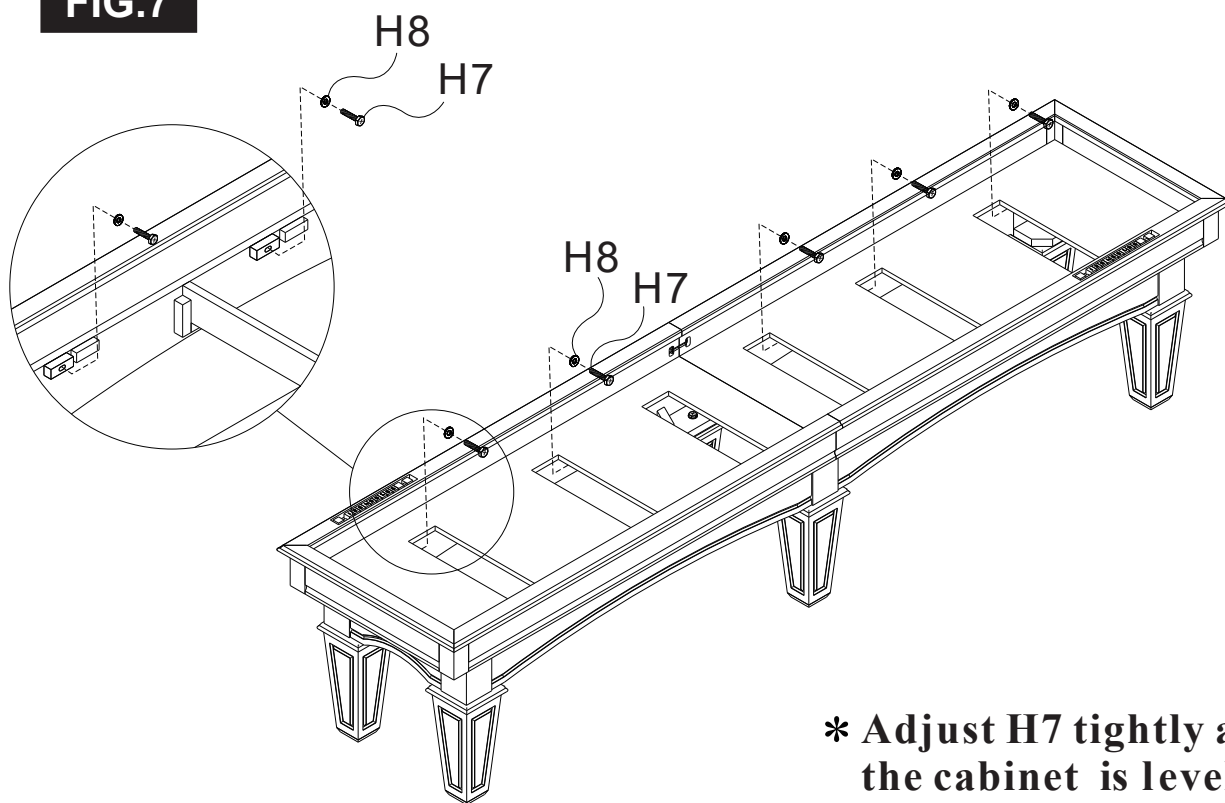


FIG.8



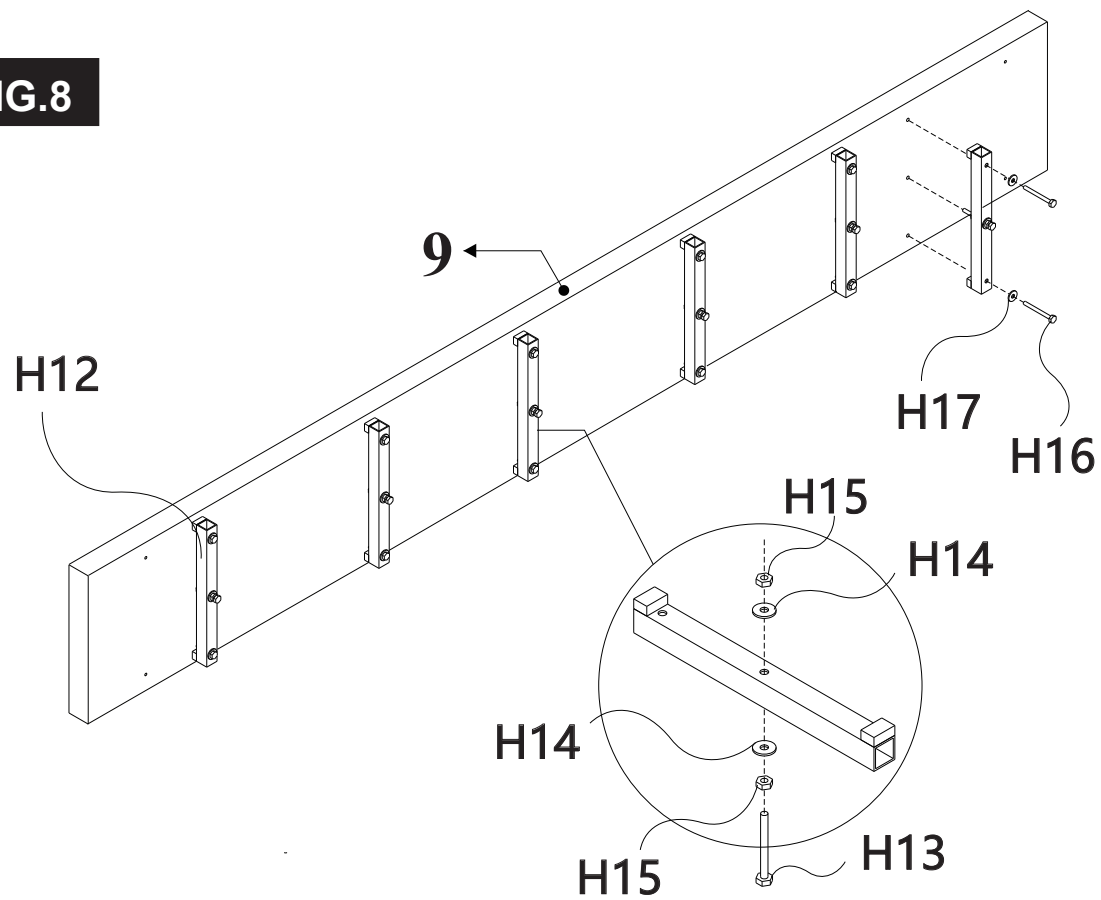


FIG.9

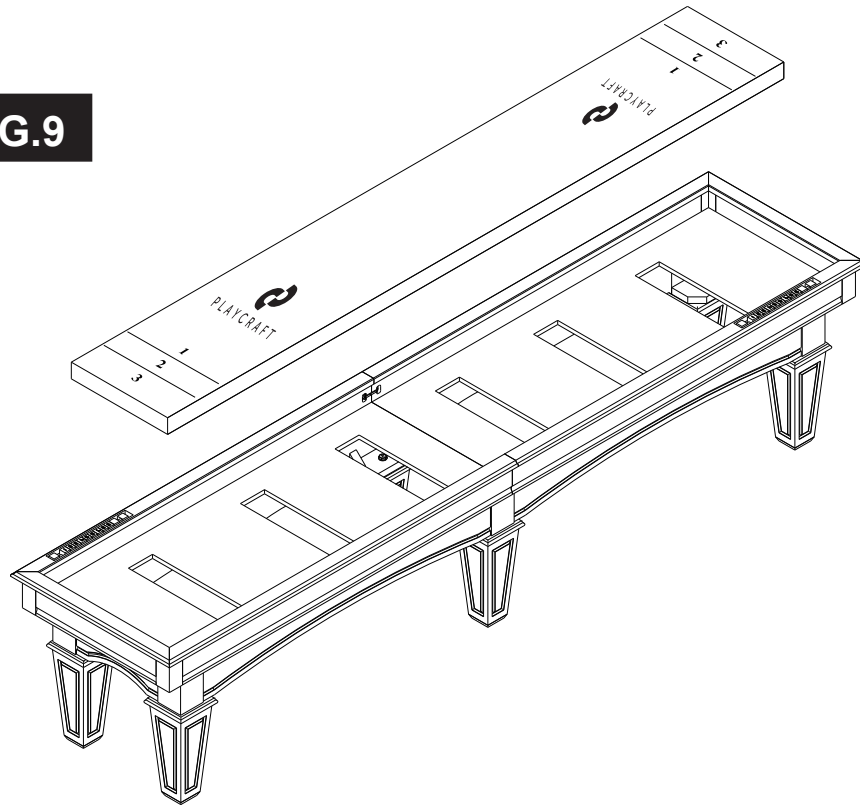

Finish

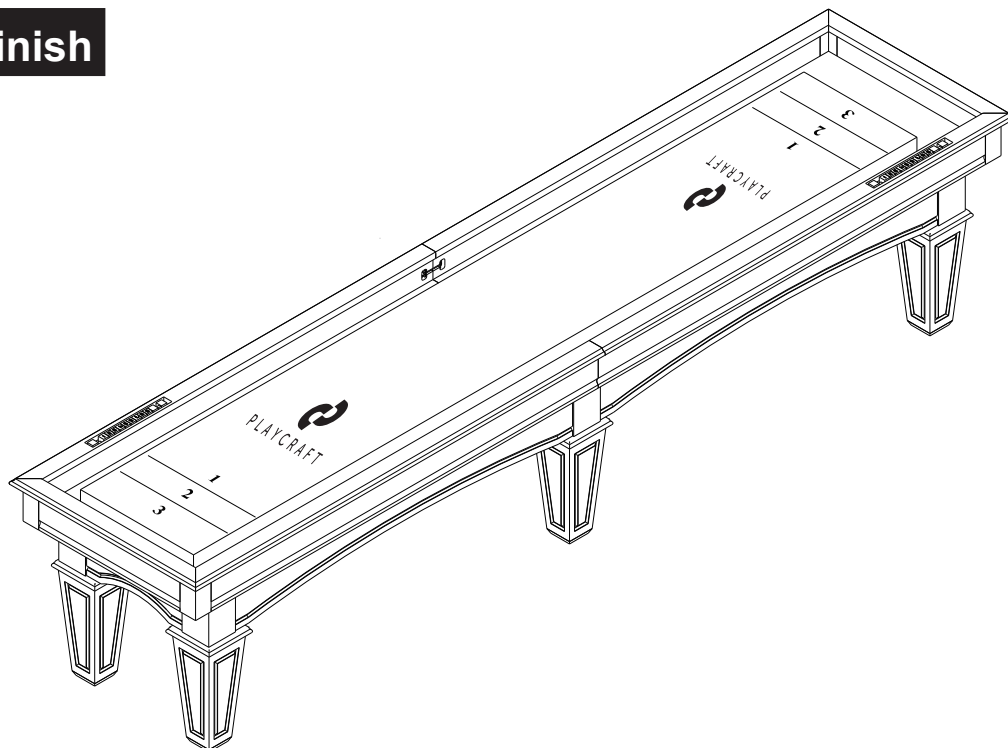


Climatic Adjusters Instructions


Concave in the middle and
Convex on the ends

status of playboard before adjusting

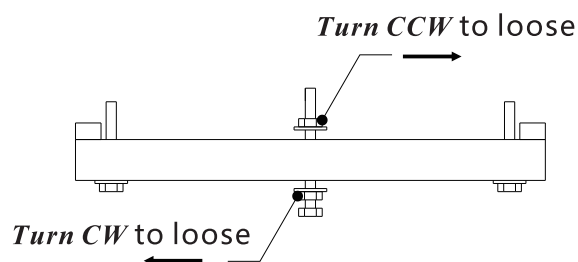
1. Loosen the top and bottom nuts on the center bolts after tightening the short bolts on two ends.



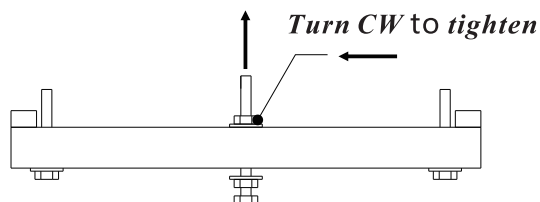2. Turn the top nut CW to rise up the bolt.



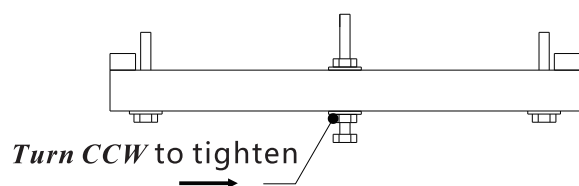
3. Turn the bottom nut CCW to tighten it after the playboard is leveled to prevent the bolts from moving or loosing.




Convex in the middle
and Concave on the ends

status of playboard before adjusting

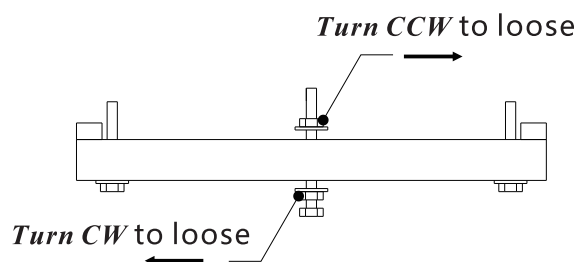
1. Loosen the top and bottom nuts on the center bolts after tightening the short bolts on two ends.



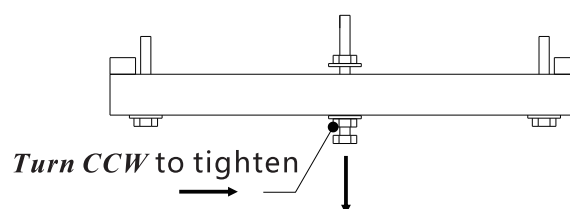2. Turn the bottom nut CCW to go down the bolt.



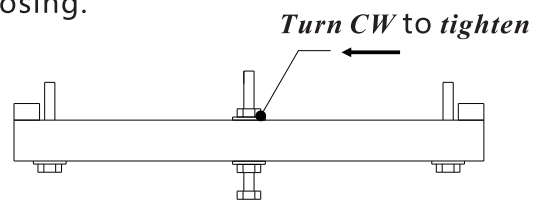3. Turn the top nut CW to tighten it after the playboard is leveled to prevent the bolts from moving or loosing.





Preparing the playfield

Your Playcraft shuffleboard table includes a butcher block playfield with a thick, polymer coating. The playfield can be cleaned using a mild multi-purpose cleaner or glass cleaner applied modestly to a soft cloth. Sponges or abrasive cleaners should not be used as they could scratch the polymer finish.

Applying the speed wax

Included with your table is a can of granular speed wax that is optimal for the length of the table. A sufficient coating of wax is necessary for the weights to glide properly. To apply the wax simply shake onto the playfield so a light coating is established over the entire surface. Glide a weight to test the application. If a weight slid under reasonable force stops at any point on the playfield then that spot or the entire surface requires additional wax. Reapply the granular speed wax as necessary.

How to play shuffleboard - basic rules

How To Play With 2 Players

To start a game, both players stand at the same end of the shuffleboard. Players toss a coin or otherwise choose who shall shoot the first weight, and what color weights each shall have (it is an advantage to shoot last).

The first player slides his/her first weight toward the opposite end of the board, which becomes the scoring end. His/Her opponent then shoots his/her first weight in a similar manner, attempting either to knock off the other player's first weight, or to outdistance it. The two players continue shooting their weights alternately, until all eight weights have been shuffled. When this has been done, one round of play has been completed. The player whose leading weight is furthest down the board (away from the players) is the winner of the round. The winner's score is then totaled and registered on the scoreboard.

The players then proceed to the opposite end of the shuffleboard, where the weights are now resting. Another round of play is begun in exactly the same manner as described above, from this end of the board, with the winner of the previous round shooting first weight. The game continues for as many rounds as are necessary, until one player has scored 15 or 21 points to win the game.

How To Play With 4 Players

When four players compete, they play as doubles teams of two players each. One player from each team is stationed at each end of the board, so that two opposing players are at the same end, with their partners at the opposite end. Having decided which team shoots first and which will shoot Red or Blue weights, the play begins as in a two-player game – the first player slides his weights toward the opposite end of the board, which becomes the scoring end. The opponent at his side then shoots his first weight in a similar manner. The two players continue shooting their weights alternately, until all eight weights have been shuffled. At this point, one round of play has been completed.

The players at the opposite end of the board, where the weights are now resting, clear the board and begin another round of play from their end, in exactly the same manner and with the partner of the previous round's winner shooting the first weight. The players continue as many rounds as necessary, until one team has scored a total of 15 points in knock off typically (or some still play to 21 points).



Customer Service

For questions on assembly or for missing or damaged parts, please contact us toll free at (888) 367-3095 or via email at support@playcraft.com. Please visit our website at www.playcraft.com to see more industry leading Playcraft and Playcraft Sport game tables.

Thank you for choosing Playcraft!

Global Merchants, Inc.
12 Lunar Drive
Woodbridge, CT 06525