


# BILLIARD TABLE

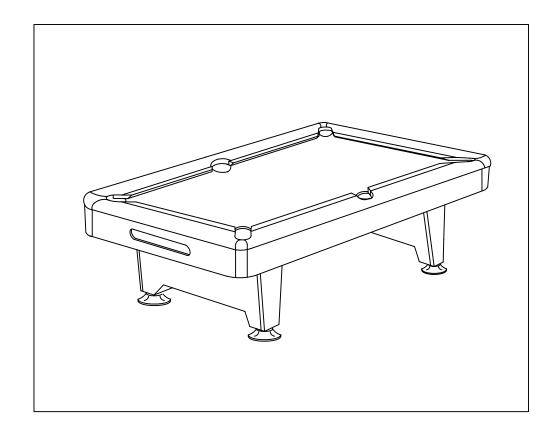

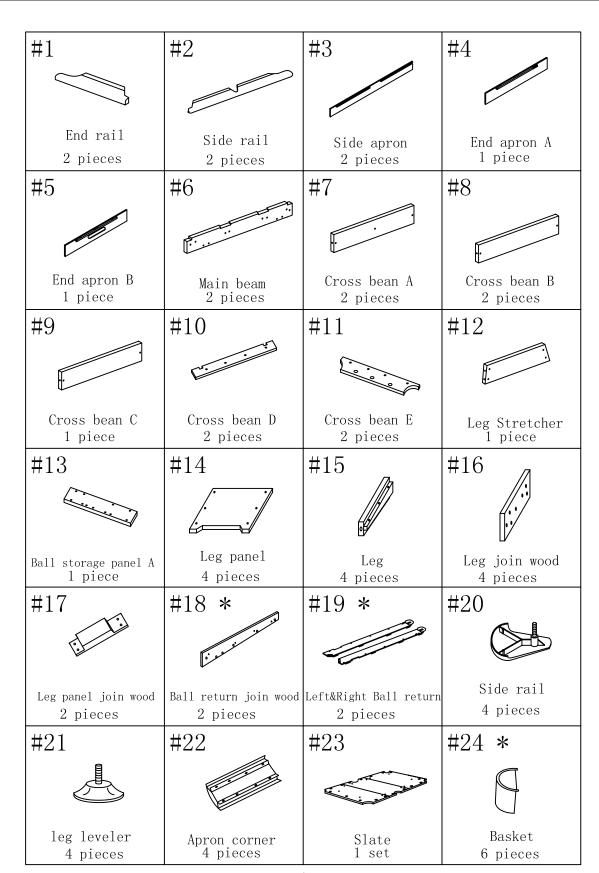


#25	#26	#27	#28
	0		0
5/16"X2-1/2"Bolt 18 pieces	5/16"X35mm Washer 18 pieces	5/16"Nut 18 pieces	1/4"X32mm Washer 4 pieces
#29	#30	#31	#32
	00		<i>(</i>  111111111111111111111111111111111111
1/4"Nut 4 pieces	Locker 4 pieces	T4X1/2"Screw 40 pieces	8#X1-1/2"Screw 32 pieces
#33	#34	#35	#36
		0	
F4X1-1/4"Screw 38 pieces	5/16"X1-1/2"Bolt 8 pieces	5/16"*23mm Washer 8 pieces	1/4"X2-1/2"Bolt 14 pieces
#37 *	#38	#39	#40
0			
1/4"X16mm Washer 14+2 pieces	1/4"nut 4 pieces	3/8"X2-1/4"Bolt 8 pieces	3/8"Nut 8 pieces
#41	#42	<b> </b> #43 <b>*</b>	<b> </b> #44
0	( <del> ====================================</del>	) iiii	) IIIII
3/8"*25mm Washer 16 pieces	Nail 40 pieces	F4X1" Screw 11+28 pieces	12#X1-1/2" Screw 12 pieces
#45	#46	#47	#48
		(James	
Wrench 1 piece	Ball storage panel B 2 pieces	1/4"*1-1/2"Bolt 2 pieces	basket 6 pieces


# Step 1:

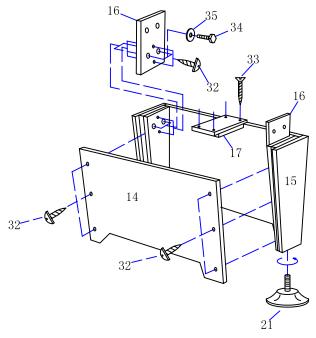

## Step 2:

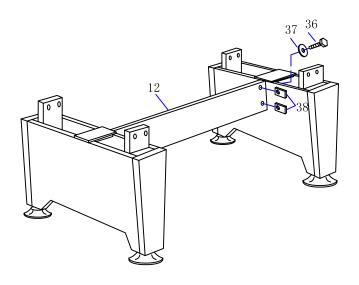



#### Step 3:

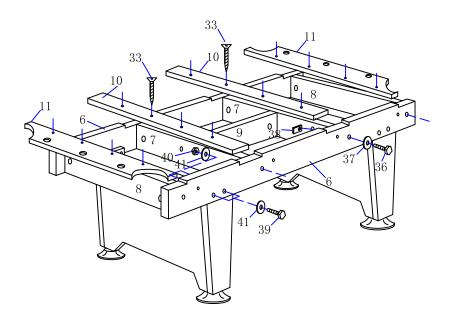


### Step 4:

Note: It doesn't have part#18 when it's with drop pocket, the assembly of part#18 is only available for the table with ball return system.

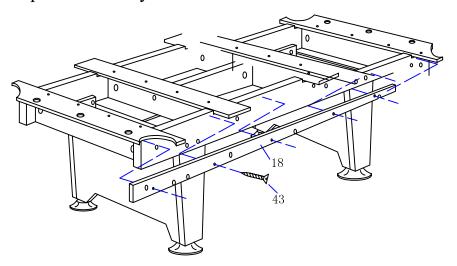

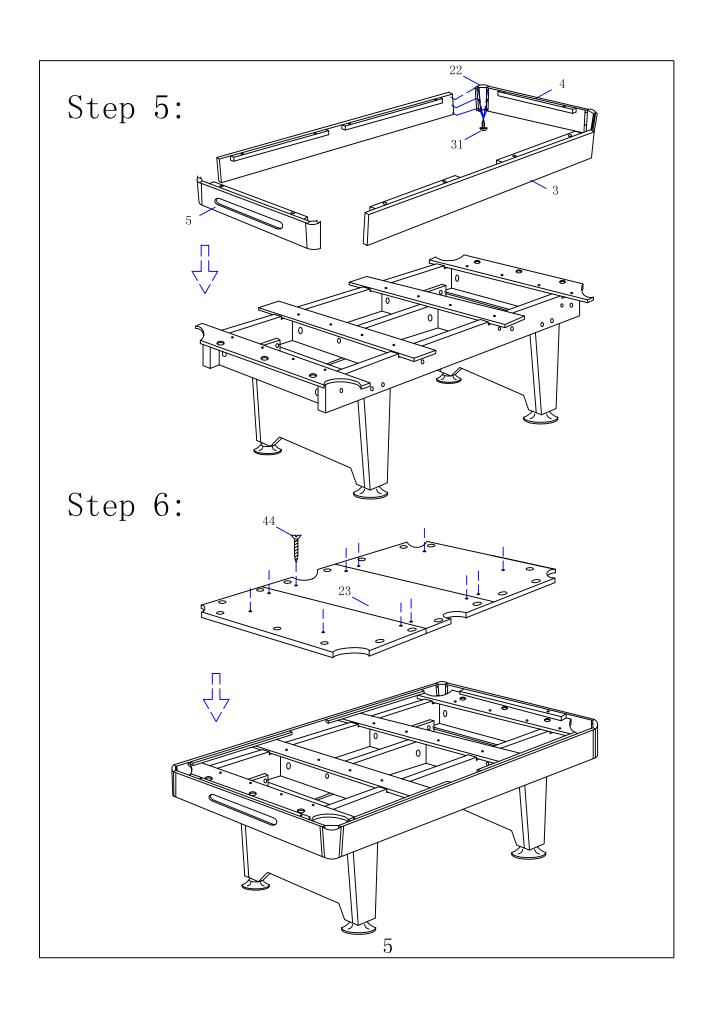

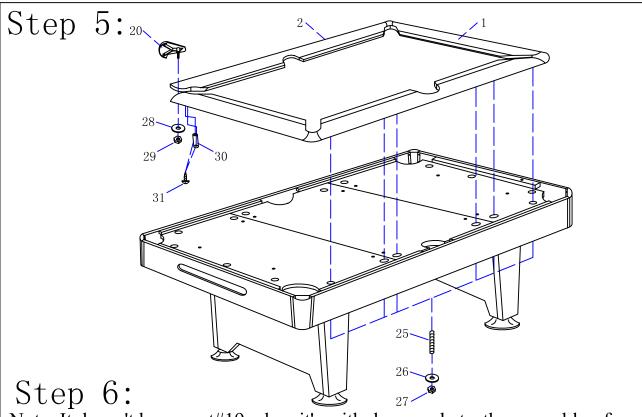

Note: It doesn't have part#19 when it's with drop pockets, the assembly of part#19 is only available for the table with ball return system. Install part#19 and part#24 when it's with ball return system. But install part#48 instead of part#24 and install part#46 when it's with drop pockets.

