



ASSEMBLY INSTRUCTIONS

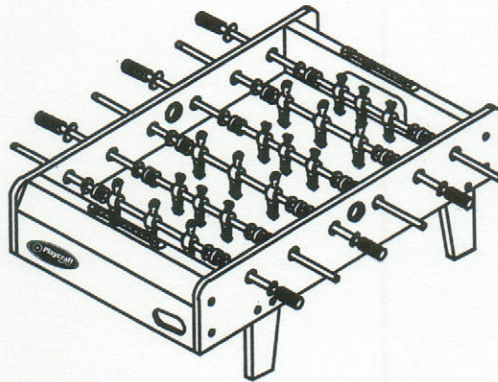

Model: PSFB4001
 Playcraft Sport Free Kick - 40" Foosball Table

PARTS LIST

01		X2	12		X2
02		X2	13		X9
03		X1	14		X9
04		X2	15		X6
05		X2	16		X8
06		X2	17		X8
07		X6	18		X18
08		X6	19		X4
09		X12	20		X4
10		X12	21		X1
11		X2			

 

Congratulations on Selecting a Playcraft Sport 40" foosball table! Please contact us via email at support@playcraft.com should you require any assistance

- 1) Not intended for use by children under 3 years of age. Please read all safety instructions and directions before assembly
- 2) Only use the table for its intended purpose
- 3) Rods extend through the side of the table opposite each player. Use caution when extending the rod
- 4) Damaged or worn parts may be dangerous. Replace worn or damaged components immediately and do not use the table until any issues have been resolved.
- 5) Check all screws, bolts, etc. on a regular basis to ensure that they are in good working condition and have not loosened over time.

