

# ASSEMBLY INSTRUCTIONS



P L A Y C R A F T



**Santa Fe 12' & 14'  
Shuffleboard Table**



## P L A Y C R A F T

Congratulations on selecting the Playcraft Santa Fe shuffleboard table. Please contact us via email at [support@playcraft.com](mailto:support@playcraft.com) should you require any assistance.


 
 
 

### **Please carefully read all safety instructions and directions before proceeding**

- 1) Assemble your table in the desired location where it will be played. Do not pick up and attempt to move the assembled table or damage can occur.
- 2) Your table is designed for use indoors in a climate controlled environment only. Damage can occur if the table is exposed to water, dampness, high humidity, freezing temperatures, etc.
- 3) The shuffleboard cradle and playfield are extremely heavy. Two or more people are required for assembly.
- 4) Only use the table for its intended purpose.
- 5) Damaged or worn parts may be dangerous for users and the integrity of the table. Replace worn or damaged components immediately and do not use the table until any issues have been resolved. For best results, use only spare parts supplied by Playcraft.
- 6) Unauthorized repairs or altering the table's design or functions may be dangerous and will void the warranty.
- 7) Check all screws, bolts, etc. on a regular basis to ensure that they are in good working condition and have not loosened over time.
- 8) Over time, shuffleboard table cradles may require leveling and the playfield climatic adjusters may require adjusting. This is considered normal maintenance as required with owning a shuffleboard table



PLAYCRAFT








 





# Parts List - Cradle & Playfield

BOX	ITEM#	ILLUSTRATION	DESCRIPTION	QTY.
LEG	1		LEG	3
	2		LEG BEAM	2
CRADLE	3		BUTCHER BLOCK PLAYFIELD	1
	4		CRADLE HALF	2
	5		WOOD PEG	4



 PLAYCRAFT

## Parts List - Hardware

BOX	ITEM#	ILLUSTRATION	DESCRIPTION	QTY.
LEG	H1		HEX HEAD CROSS BOLT 3/8" X 1-3/4"(M10X45mm)	12
	H2		FLAT WASHER 3/8" I.D.	12
	H3		HEX HEAD CROSS BOLT 5/16" X 2"(M8X51mm)	12
	H4		FLAT WASHER 5/16" I.D.	12
CRADLE	H5		STUD BOLT 5/16" X 5-1/2"(M8X140mm)	2
	H6		FLAT OVAL WASHER 5/16" I.D.	4
	H7		HEX NUT 5/16" I.D.	4
	H8		CLIMATIC ADJUSTERS	4
	H9		HEX HEAD BOLT 3/8" X 4-3/4"(M10X 120mm)	4
	H10		FLAT WASHER 3/8" I.D.	4
	H11		HEX NUT 3/8" I.D.	4
	H12		HEX HEAD CROSS BOLT 3/8" X 3-1/8"(M10 X 80mm)	8
	H13		FLAT WASHER 3/8" I.D.	8




PLAYCRAFT

# Assembly Steps


**FIG.1**

**\*\* NOTE \*\***

**ASSEMBLE THE CRADLE IN THE  
LOCATION WHERE THE TABLE  
WILL BE PLAYED**

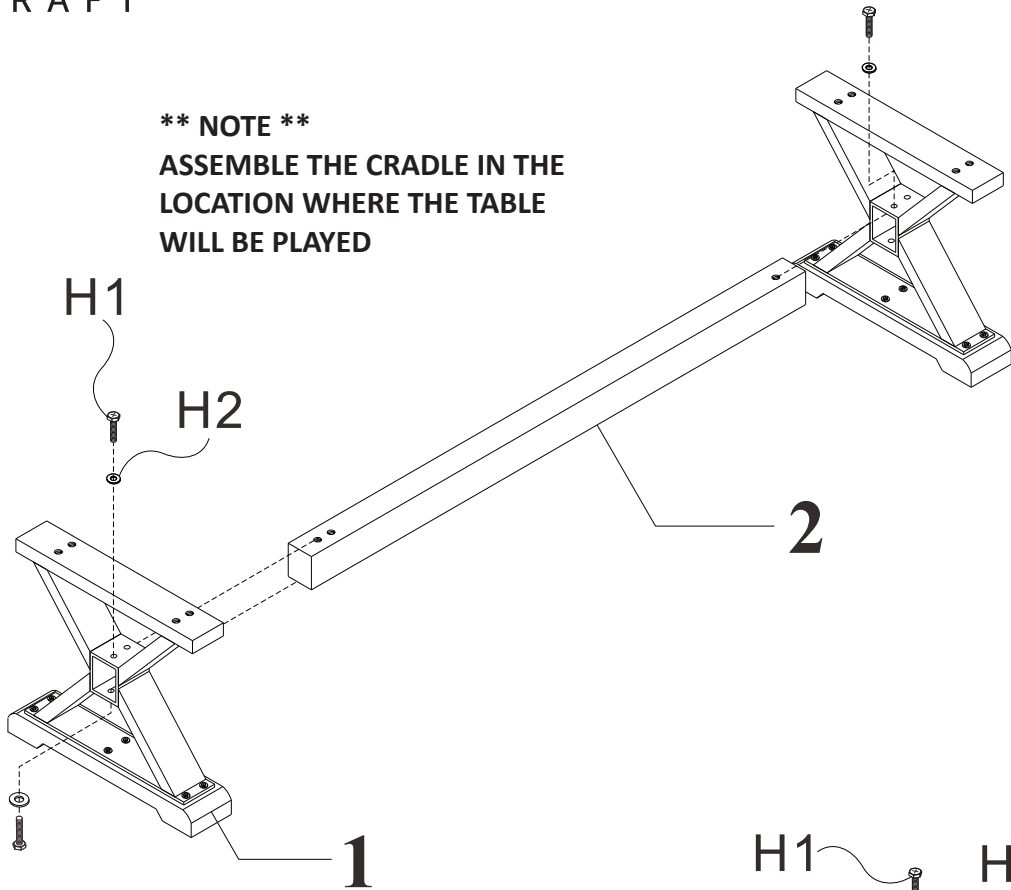 


**FIG.2**

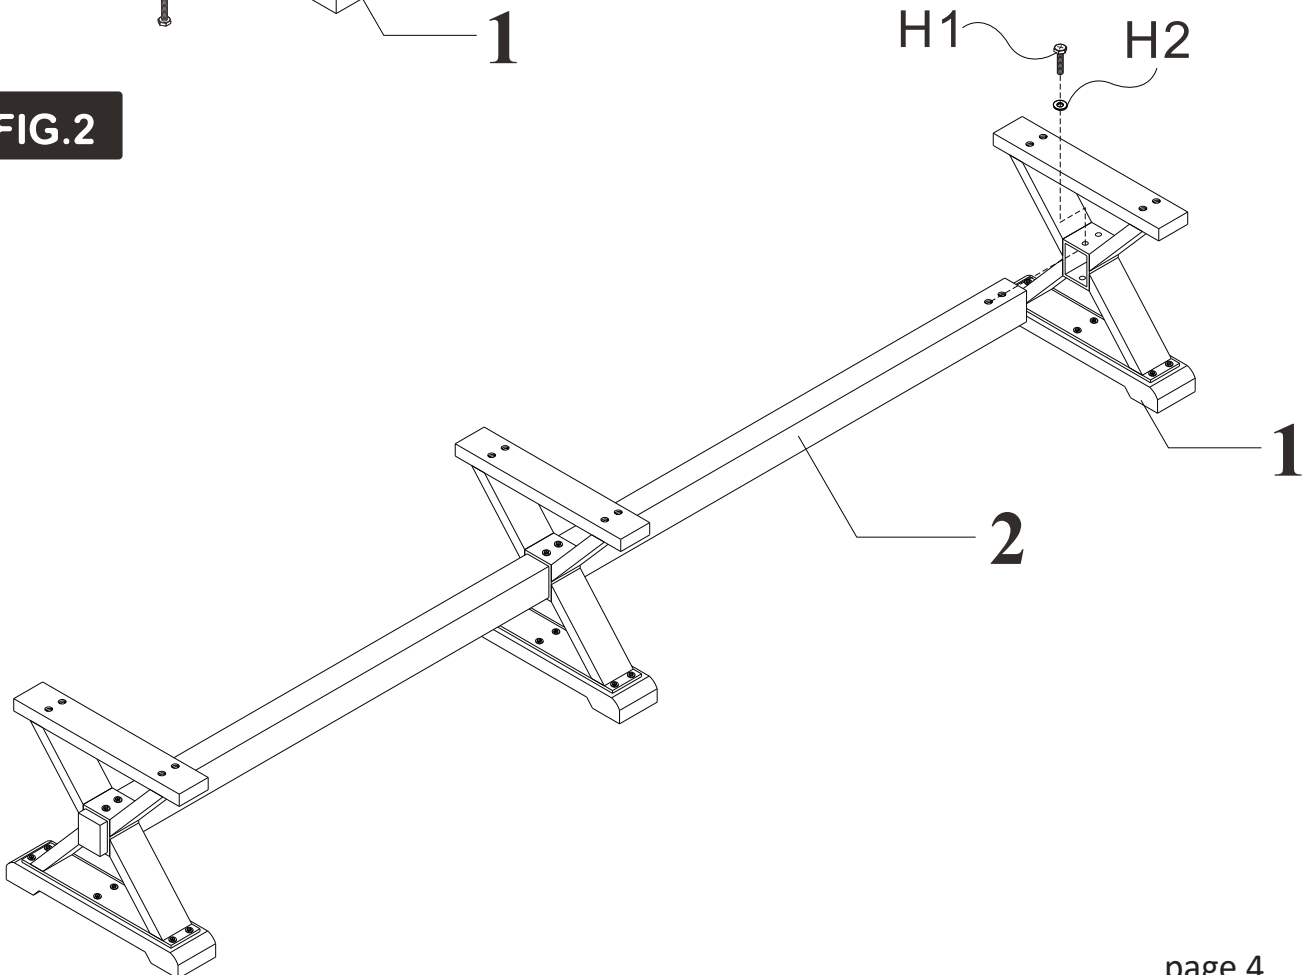 




PLAYCRAFT

**FIG.3**

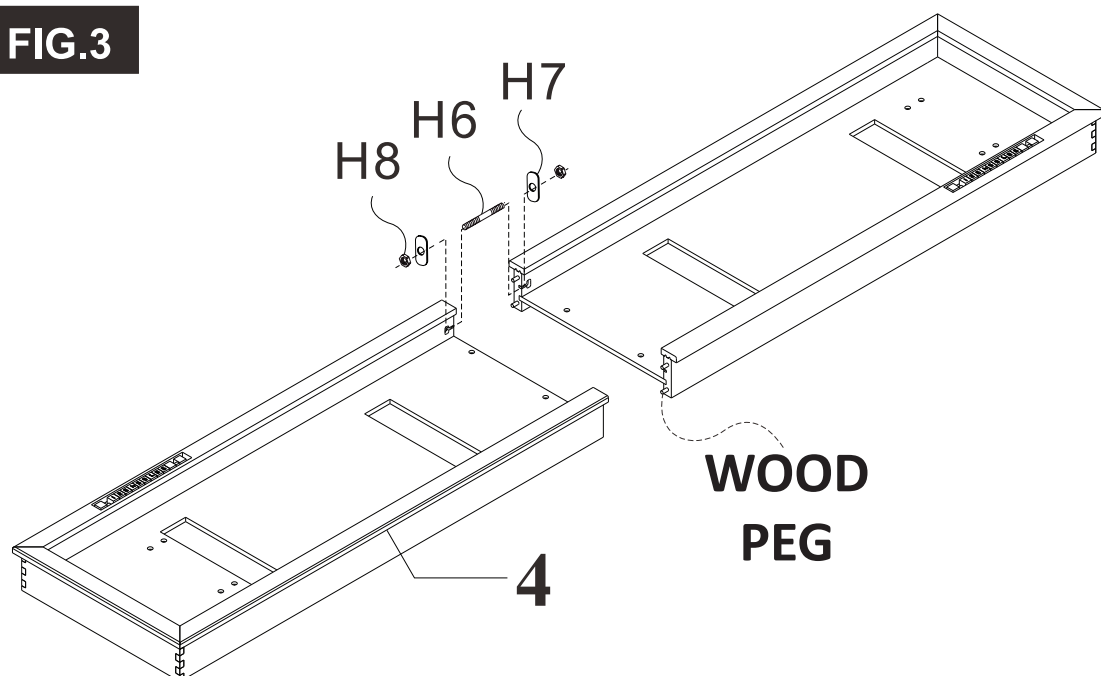 


**FIG.4**

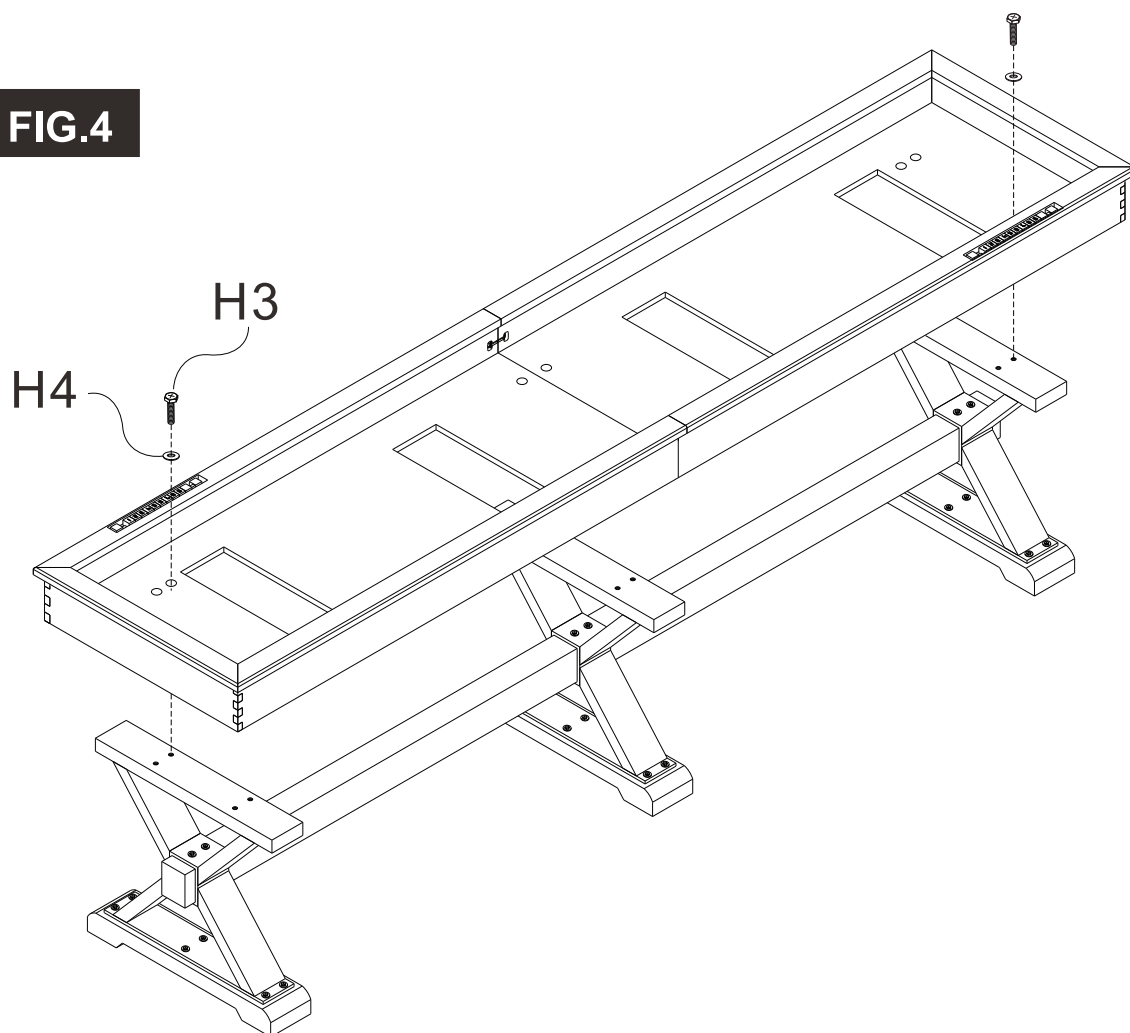 




PLAYCRAFT

**FIG.5**

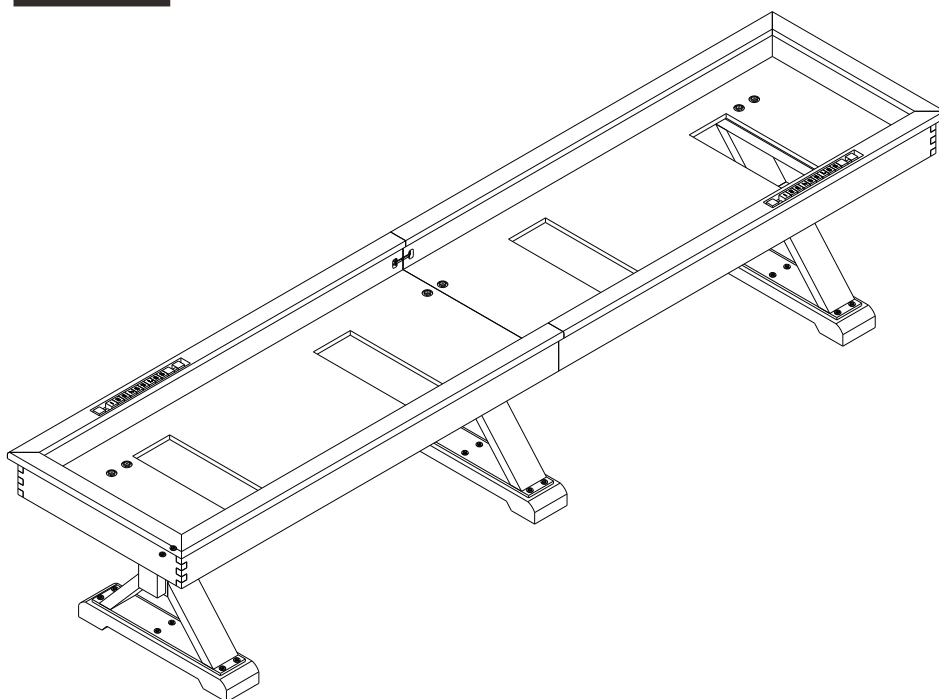 


**FIG.6**

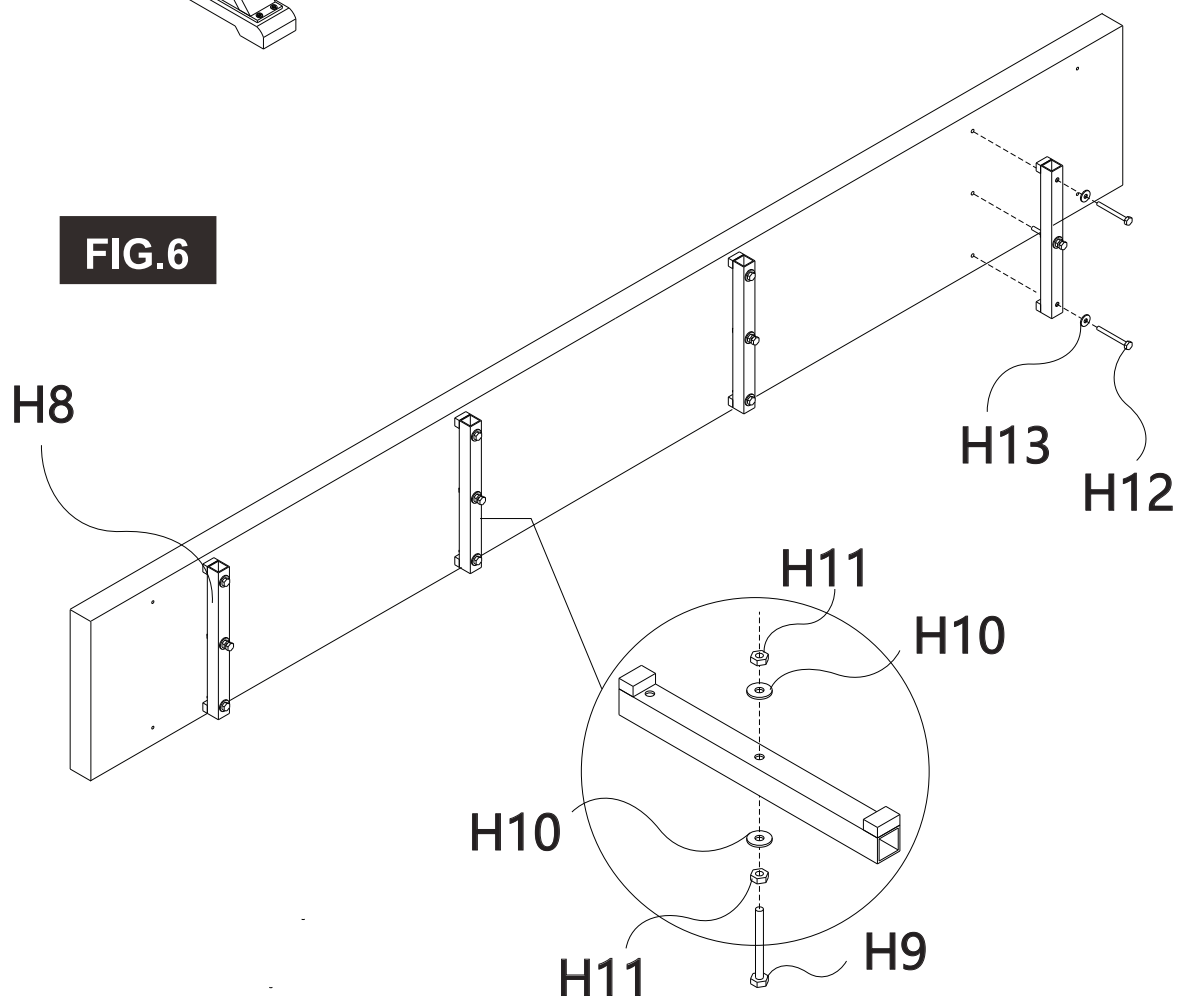 




PLAYCRAFT

 **FIG.7**

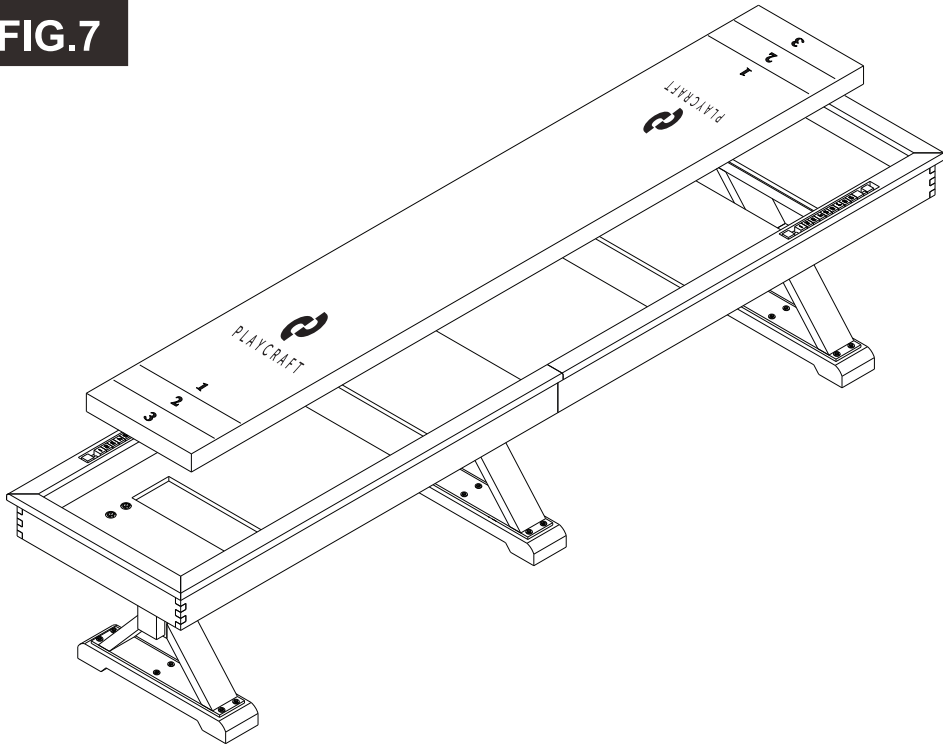

**FINISHED**

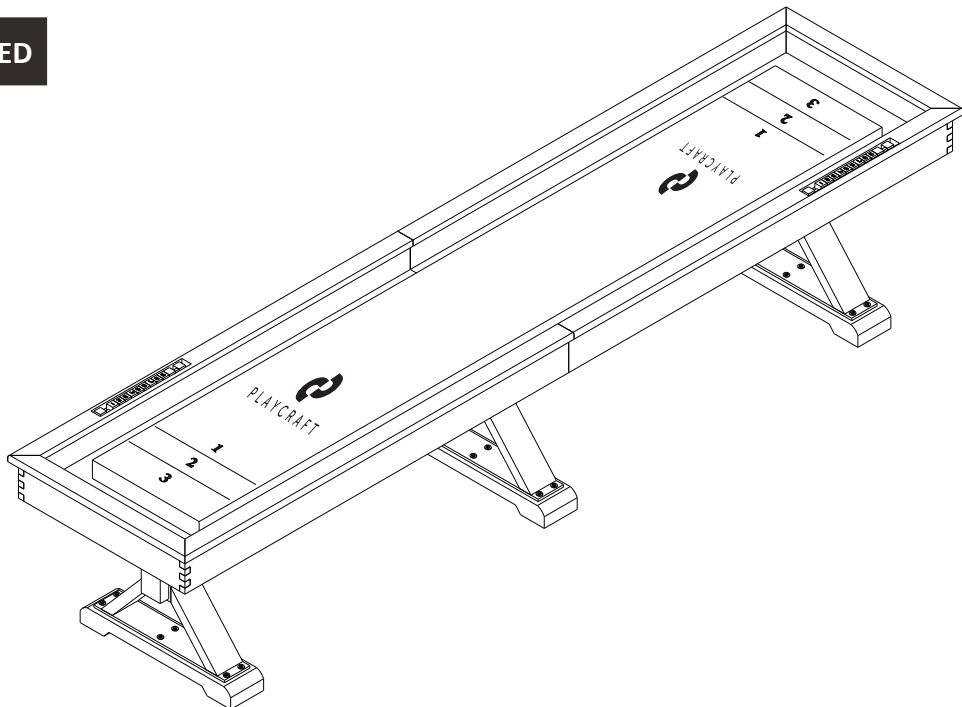 






PLAYCRAFT

## Climatic Adjusters Instructions

 
Concave in the middle and  
Convex on the ends

status of playboard before adjusting


1. Loosen the top and bottom nuts on the center bolts after tightening the short bolts on two ends.

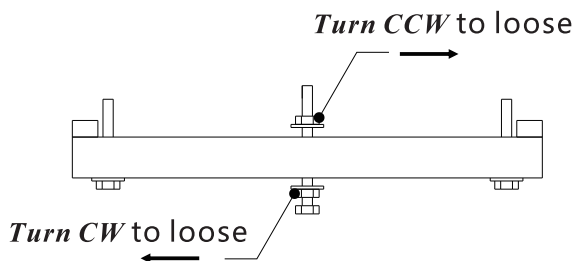

 2. Turn the top nut CW to rise up the bolt.

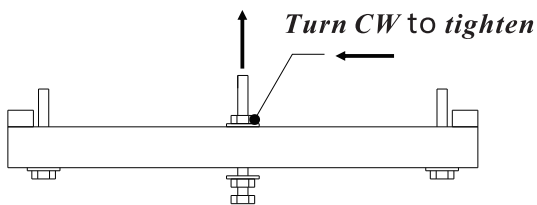

 
3. Turn the bottom nut CCW to tighten it after the playboard is leveled to prevent the bolts from moving or losing.

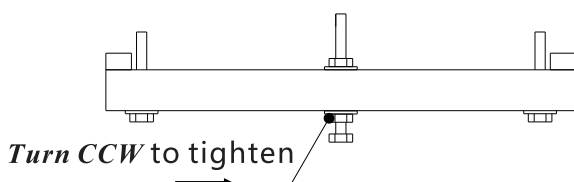


Convex in the middle  
and Concave on the ends

status of playboard before adjusting

 
1. Loosen the top and bottom nuts on the center bolts after tightening the short bolts on two ends.

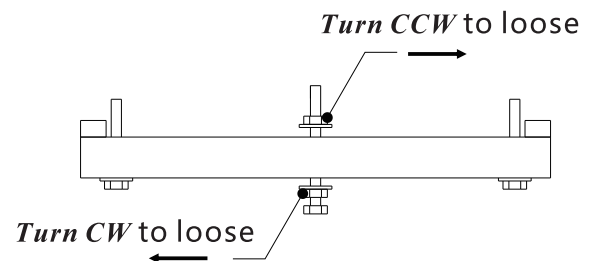

 2. Turn the bottom nut CCW to go down the bolt.

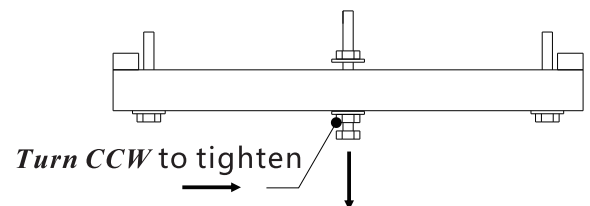

 3. Turn the top nut CW to tighten it after the playboard is leveled to prevent the bolts from moving or losing.

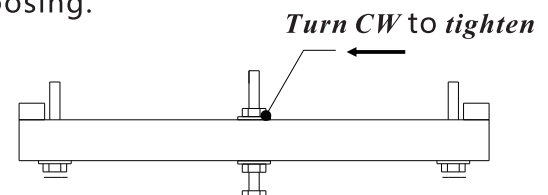



## PLAYCRAFT

### Preparing the Playfield

Your Playcraft shuffleboard table includes a butcher block playfield with a thick, polymer coating. The playfield can be cleaned using Playcraft Cleaner Polisher applied to a soft cloth. Alternately use a mild multi-purpose cleaner or glass cleaner applied modestly to a soft cloth. Sponges or abrasive cleaners should not be used as they could scratch the polymer finish.

### Applying the Speed Wax

Included with your table is a can of granular speed wax that is optimal for the length of the table. Prior to applying the speed wax, a coating of Playcraft Spray Silicone should be applied to the playfield. Once coated do not wipe the silicone. The silicone holds the speed wax in place for an extended period of time. A sufficient coating of speed wax should now be applied to the playfield. To apply the wax simply shake onto the playfield so a moderate coating is established over the entire surface. Glide a weight to test the application. If a weight slid under reasonable force stops at any point on the playfield then that spot or the entire surface requires additional speed wax. Reapply the granular speed wax as necessary.

## How to play shuffleboard - basic rules

### How To Play With 2 Players

To start a game, both players stand at the same end of the shuffleboard. Players toss a coin or otherwise choose who shall shoot the first weight, and what color weights each shall have (it is an advantage to shoot last).

The first player slides his/her first weight toward the opposite end of the board, which becomes the scoring end. His/Her opponent then shoots his/her first weight in a similar manner, attempting either to knock off the other player's first weight, or to outdistance it. The two players continue shooting their weights alternately, until all eight weights have been shuffled. When this has been done, one round of play has been completed. The player who's leading weight is furthest down the board (away from the players) is the winner of the round. The winner's score is then totaled and registered on the scoreboard.

The players then proceed to the opposite end of the shuffleboard, where the weights are now resting. Another round of play is begun in exactly the same manner as described above, from this end of the board, with the winner of the previous round shooting first weight. The game continues for as many rounds as are necessary, until one player has scored 15 or 21 points to win the game.

### How To Play With 4 Players

When four players compete, they play as doubles teams of two players each. One player from each team is stationed at each end of the board, so that two opposing players are at the same end, with their partners at the opposite end. Having decided which team shoots first and which will shoot Red or Blue weights, the play begins as in a two-player game – the first player slides his weights toward the opposite end of the board, which becomes the scoring end. The opponent at his side then shoots his first Weight in a similar manner. The two players continue shooting their weights alternately, until all eight weights have been shuffled. At this point, one round of play has been completed.

The players at the opposite end of the board, where the weights are now resting, clear the board and begin another round of play from their end, in exactly the same manner and with the partner of the previous round's winner shooting the first weight. The players continue as many rounds as necessary, until one team has scored a total of 15 points in knock off typically (or some still play to 21 points).



P L A Y C R A F T

## Customer Service

For questions on assembly or for missing parts, please contact us via email at [support@playcraft.com](mailto:support@playcraft.com). Please visit our website at [www.playcraft.com](http://www.playcraft.com) to see more industry leading Playcraft and Playcraft Sport game tables.

**Thank you for choosing Playcraft!**

Global Merchants, Inc.  
12 Lunar Drive  
Woodbridge, CT 06525