

## PARTS LIST

#1	#2	#3	#4	#5
Score Unit 1 pc	Post Set 1 set	Adapter 1 pc	Bolt 1/4"*2" 3 pcs	Bolt 1/4"*1-3/4" 4 pcs
#6	#7	#8	#9	#10
Washer 1/4"*19mm 10 pcs	Bolt 5/16"*3" 4 pcs	Nut 5/16" 4 pcs	Washer 5/16"*23mm 8 pcs	Nut 1/4" 3 pcs
#11	#12			
Padding Board 1 pc	Allen wrench 1 pc			

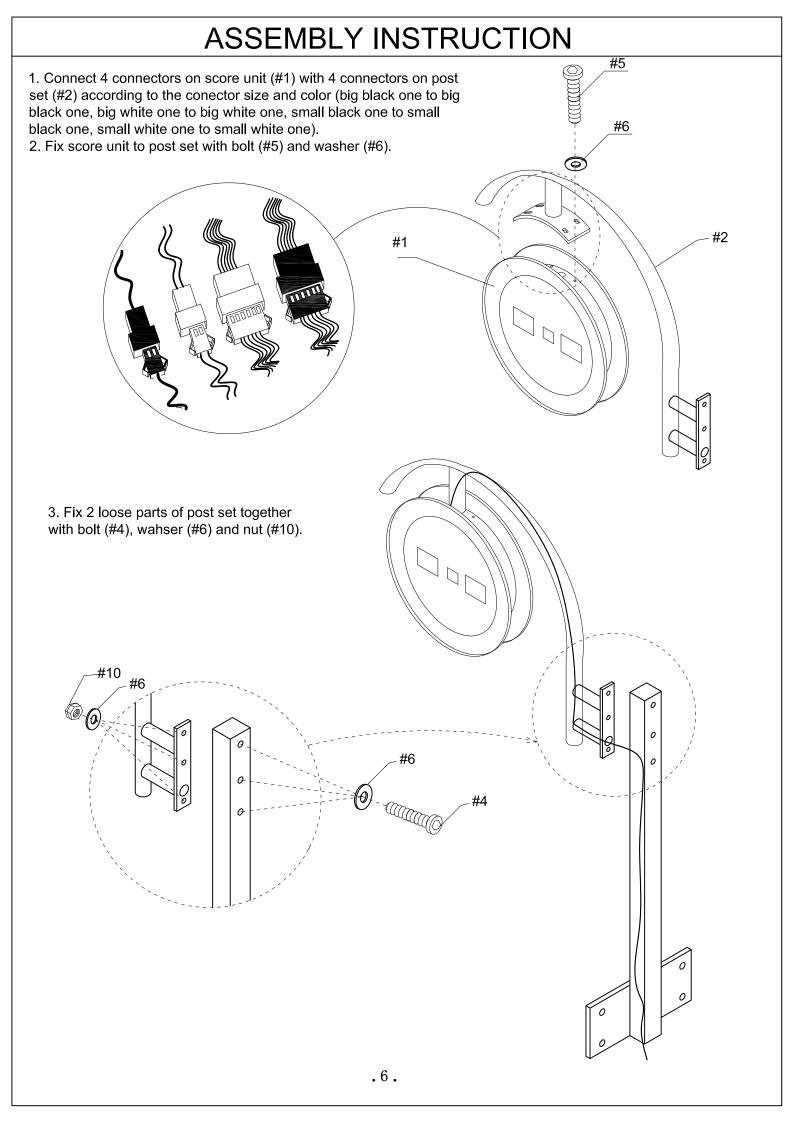

## **ASSEMBLY INSTRUCTION**

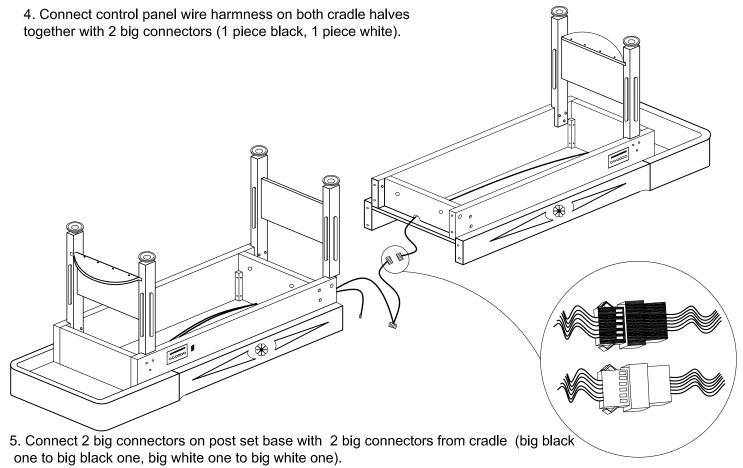

- 6. Conect small white connector on post set base with small white connector from cradle.
- 7. Connect small black connector on post set base to adapter.
- 8. Fix post set on cradle at center with padding board (#11), bolt (#7), washer (#9) and nut (#8).
- 9. Connect adaper to electricity, switch on (a red button beside one of the control panel on cradle frame at one end of table), select games between 15 points, 21 points and free play, you can enjoy your playing now. Pree botton Red+ to plus scores to red side, press button Red- to minus scores to red side, Pree botton Blue+ to plus scores to blue side, press button Blue- to minus scores to blue side, press reset button reset the game.

