

Scorer Operating Instruction

Control Panel



Display Screen



1. Scorer system includes 1 scorer with 2 display screens and 2 control panels on 2 ends of cradle.
2. It has 3 display windows on display screen. The center window displays game modes which are "15 points", "21 points" or "Free play". The 2 side windows display scores of blue party and red party.
3. It has 6 buttons on each control panel marked with "Blue+", "Blue-", "Select", "Reset", "Red+" and "Red-" separately. "Blue+" means plus score for blue party. "Blue-" means minus score for blue party. "Red+" means plus score for red party. "Red-" means minus score for red party. Press select button to select game modes. Press reset button to reset scores of both blue party and red party.