

**MODEL:PTASTWAB08-Astral** 



Congratulations on selecting a Rio Grande slate pool table - part of the Fairfield Collection by Playcraft. Please contact us ia email at support@playcraft.com should you require any assistance.

## Please carefully read all safety instructions and directions before proceeding

- 1) Your table is designed for use indoors in a climate controlled environment only. Damage can occur if the table is exposed to water, dampness, high humidity, freezing temperatures, etc.
- 2) Professional assembly is strongly recommended. This assembly manual is intended to guide an experienced slate pool table installer with the assembly process of this specific cabinet. It does not guide on setting the slate or attaching the billiard cloth for which the process is the same regardless of the cabinet type.
- 2) The pool table cabinet and slate are extremely heavy. Two or more people are required for assembly.
- 3) The table must be assembled in the final location where the table will be played. Attempting to move the table once assembled could result in damage to the table or serious injury.
- 5) Only use the table for its intended purpose.
- Damaged or worn parts may be dangerous for users and the integrity of the table.

  Replace worn or damaged components immediately and do not use the table until any issues have been resolved. For best results, use only spare parts supplied by Playcraft.
- 7) Unauthorized repairs or alterating the table's design or functions may be dangerous and will void the warranty.
- 8) Check all screws, bolts, etc. on a regular basis to ensure that they are in good working condition and have not loosened over time.
- 9) Over time, pool tables may require releveling. This is considered normal maintenance as required with owning a slate pool table




		PARTS LIST			
NO.	IMAGE	DESCRIPTION	SPECIFICATION	QTY	UNIT
1		TABLE LEG 1	1060*1135*305	2	PCS
		ASSEMBLY POSITION	FRAME		
2		TABLE LEG 2	1070*1150*305	2	PCS
		ASSEMBLY POSITION	FRAME		
3		LONGITUDINAL BEAM	2180*100*83	2	PCS
		ASSEMBLY POSITION	FRAME		
4		SHORT BEAM	1067*100*118	2	PCS
		ASSEMBLY POSITION	FRAME		
(5)		LONGITUDINAL	2064*80*40	1	PC
		CENTRE BEAM			
		ASSEMBLY POSITION	FRAME		
6		MIDDLE BEAM	997*120*40	2	PCS
		ASSEMBLY POSITION	FRAME		
7		WOODEN CONNECTOR FOR THE TABLE FRAME	220*50*32	4	PCS
		ASSEMBLY POSITION	FRAME		
8		SIDE SLATE 1	805*1295*40	1	PC
		ASSEMBLY POSITION	TOP RAIL		
		MIDDLE SLATE	805*1295*40	1	PC
		ASSEMBLY POSITION	TOP RAIL		
		SIDE SLATE 2	805*1295*40	1	PC
		ASSEMBLY POSITION	TOP RAIL		
9		CLOTH	805*1295*40	1	PC
		ASSEMBLY POSITION	TOP RAIL		
		LONG RAIL	2562*163*160	2	PCS
10		ASSEMBLY POSITION	TOP RAIL		
(11)		SHORT RAIL	1443*163*160	2	PCS
		ASSEMBLY POSITION	TOP RAIL		




HARDWARE LIST							
NO.	IMAGE	DESCRIPTION	SPECIFICATION	QTY	UNIT		
Н1		ALLEN BOLOT	ø10*30	6	PCS		
		FOR TABLE LEG			ASSEMBLY POSITION		
H2		BOLT NUT	M10	6	PCS		
		FOR TABLE LEG			ASSEMBLY POSITION		
Н3		ALLEN BOLOT	ø12*25	4	PCS		
		FOR TABLE LEG			ASSEMBLY POSITION		
Н4		HEX BOLT	ø10*130	8	PCS		
		FOR WOODEN CONNECTOR AND CROSS BEAM			ASSEMBLY POSITION		
Н5	100140	FLAT WAHER	M10*30*2	16	PCS		
		FOR WOODEN CONNECTOR AND CROSS BEAM			ASSEMBLY POSITION		
Н6		HEX BOLT	ø12*130	8	PCS		
		FOR CROSS BEAM			ASSEMBLY POSITION		
117	To the state of th	FLAT WAHER	M12*30*2	16	PCS		
Н7		8PCS FOR THE CROSS BEAM AND 8PCS FOR CROSS BEAM AND LEG			ASSEMBLY POSITION		
		BOLT NUT	M10	8	PCS		
Н8		FOR WOODEN CONNECTOR AND CROSS BEAM		M	ASSEMBLY POSITION		
Н9		SEMICIRCLE SCREW NUT	M12	8	PCS		
		USED TO FIX THE CROSS BEAM			ASSEMBLY POSITION		
H10		FLAT HEAD SCREW	4.2*45	8	PCS		
		USED TO FIX THE CROSS BEAM			ASSEMBLY POSITION		
		HEXAGON BOLT	ø12*75	8	PCS		
H11		FOR CROSS BEAM AND TABLE LEG			ASSEMBLY POSITION		
H12	La Company (100)	ADJUSTABLE SCREW	ø10*75	16	PCS		
		USED TO FIX THE CROSS BEAM			ASSEMBLY POSITION		


П12			3mm*2pcs	4	PCS
H13		TO ADJUST THE TABLE LEG			PCS
111.4	<b>Quantitation</b>	WOODEN SCREW	6*60	12	PCS
H14		FOR SLATE AND TABLE FRAME			ASSEMBLY POSITION
		BARREL NUT	ø8*30	4	PCS
H15		FOR THE LONG AND SHORT RAIL			ASSEMBLY POSITION
		DOUBLE HEAD BOLT	ø8*80	4	PCS
H16		FOR THE LONG AND SHORT RAIL			ASSEMBLY POSITION
		SEMICIRCLE WASHER	M8	4	PCS
H17		FOR THE LONG AND SHORT RAIL			ASSEMBLY POSITION
	100	FLAT WAHER	M8*25*1.5	4	PCS
H18		FOR THE LONG AND SHORT RAIL			ASSEMBLY POSITION
		BOLT NUT	M8	4	PCS
H19		FOR THE LONG AND SHORT RAIL			ASSEMBLY POSITION
		METAL CONNECTOR	/	4	PCS
H20		FOR THE LONG AND SHORT APRON			ASSEMBLY POSITION
1121		ALLEN BOLOT M6*16 16		PCS	
H21		FOR THE LONG AND SHORT APRON			ASSEMBLY POSITION
		HEX BOLT	ø10*60	18	PCS
H22		USED TO FIX THE TOP RAILS AND SLATE			ASSEMBLY POSITION
		DOME WASHER	ø10*35*5	18	PCS
H23		USED TO FIX THE TOP RAILS AND SLATE			ASSEMBLY POSITION
		LEATHER POCKET	/	4	PCS
H24					ASSEMBLY POSITION
		LEATHER POCKET	/	2	PCS
H25					ASSEMBLY POSITION
		FLAT HEAD SCREW	4.2*16	12	PCS
H26		FOR POCKET AND SLATE BACKER			ASSEMBLY POSITION
H27	TOUCH-UP-MARKER PEN			1	PCS




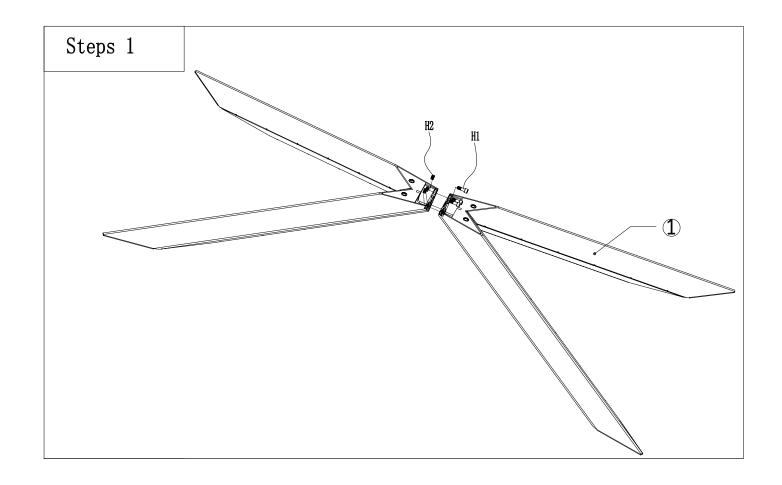

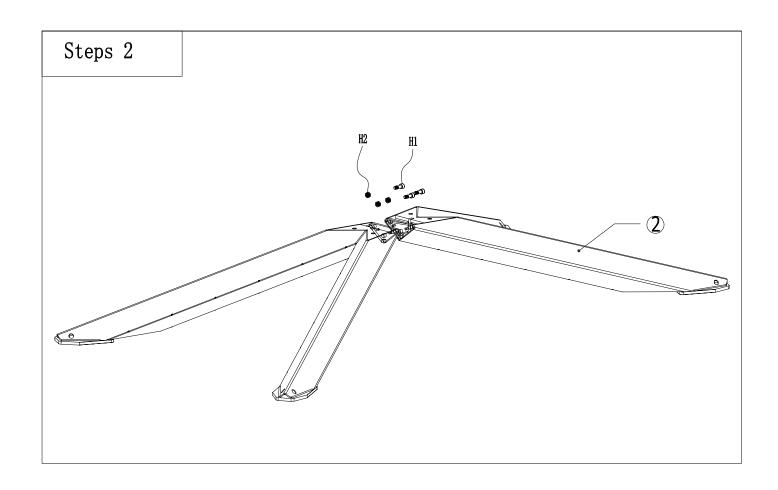





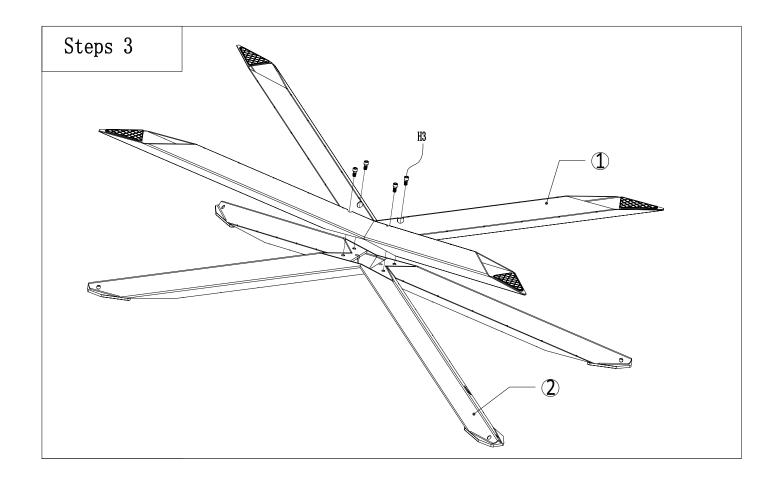

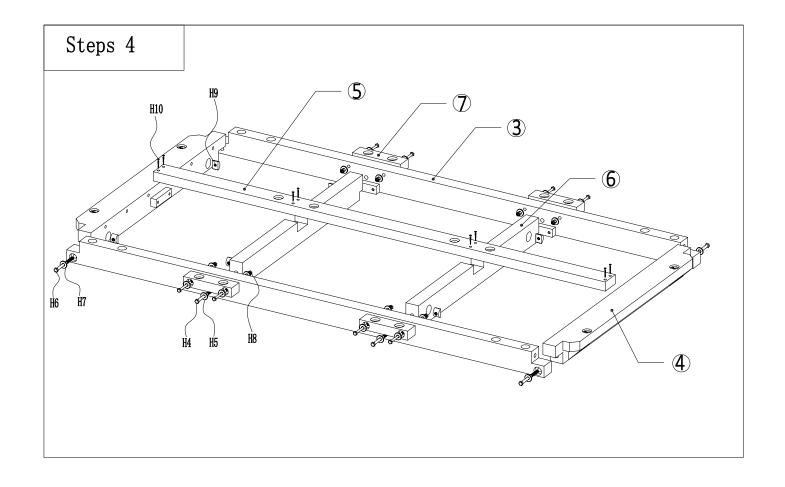





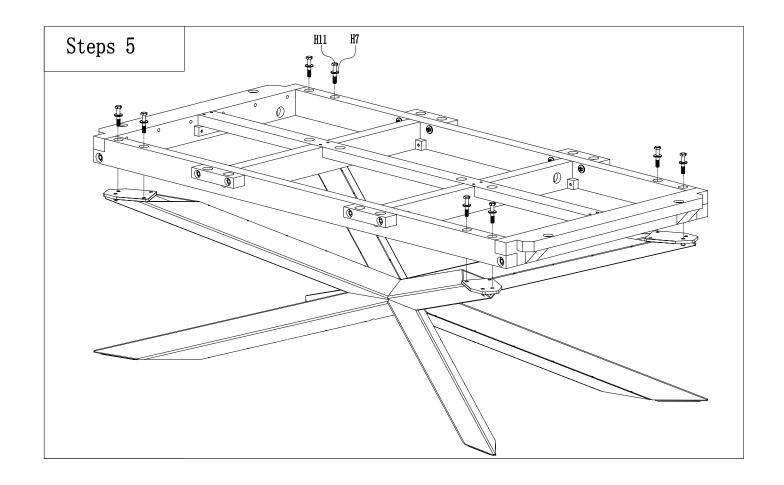

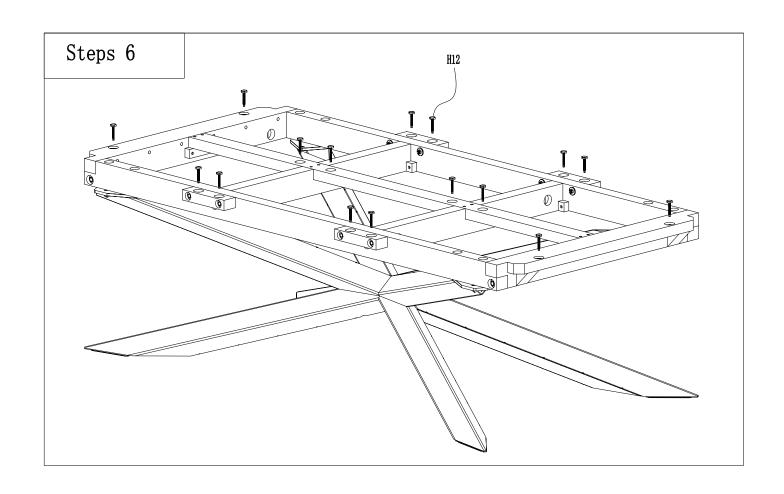





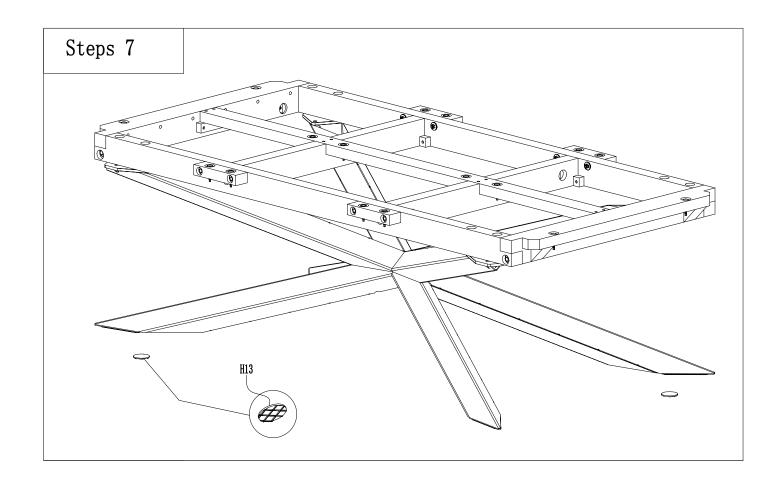

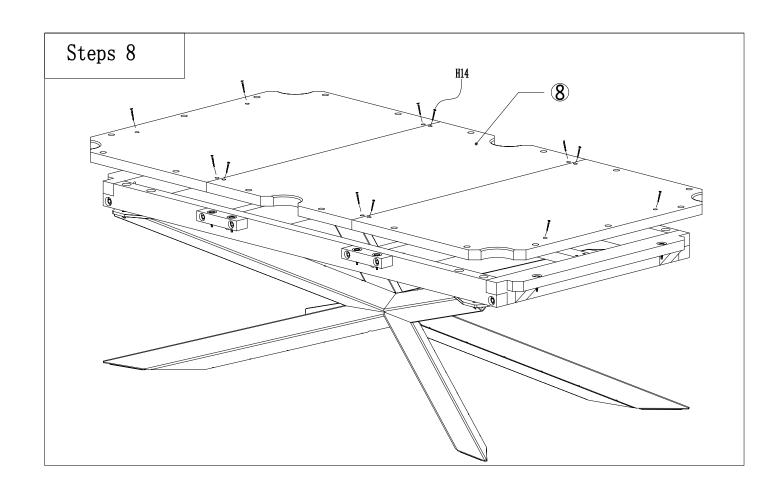




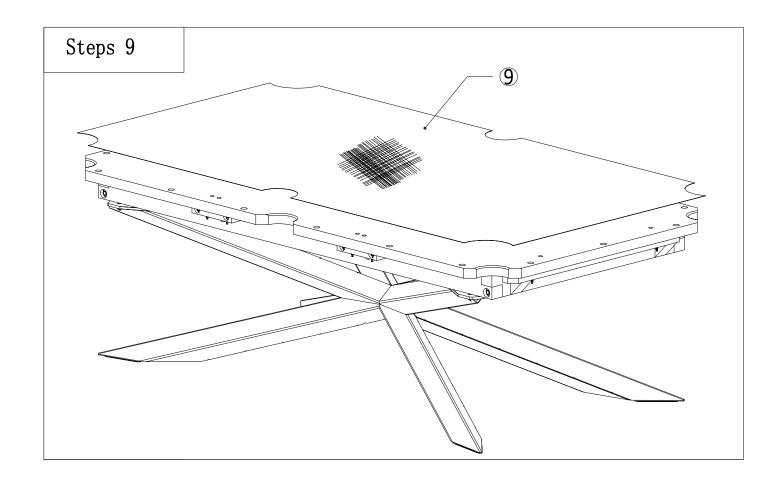


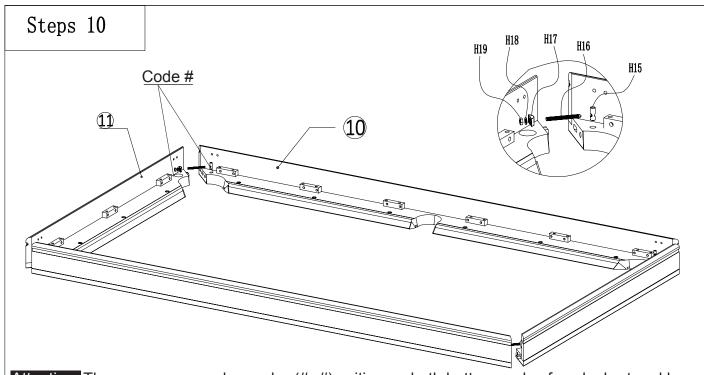


Attention: There are some code number(#--#) writing on both bottom ends of each short and long rails, please connect 2 rail ends together correspondingly with the same code # by sequence in order to avoid some big gap between each 2 ends.




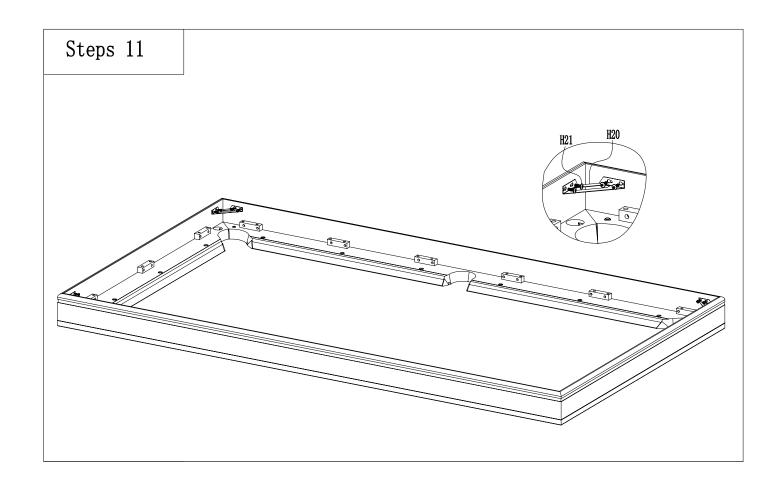


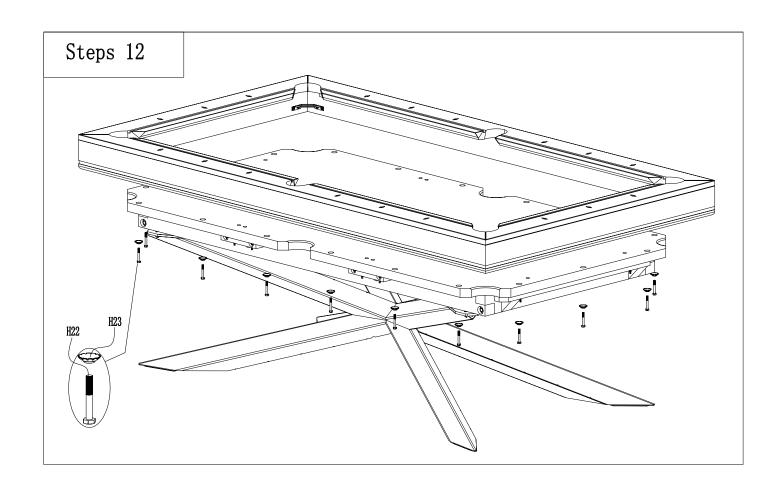



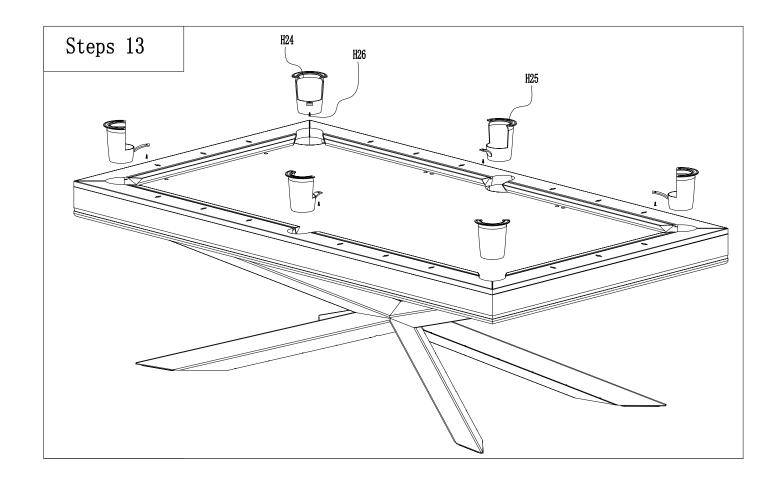

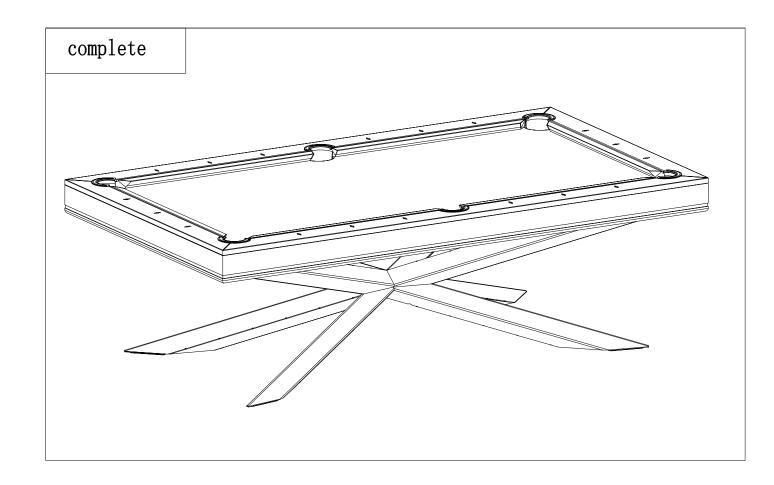

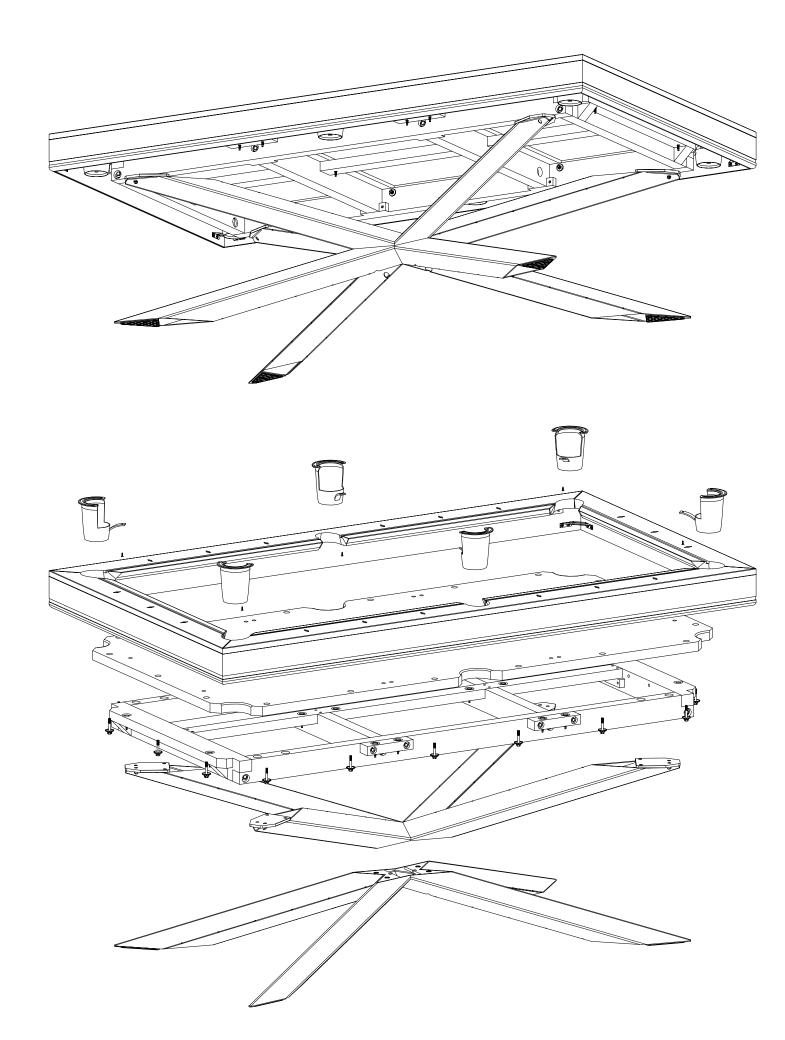



## **Customer Service**

For questions on assembly or for missing or damaged parts, please contact us via email at support@playcraft.com. Please visit our website at www.playcraft.com to see more industry leading Playcraft and Playcraft Sport game tables.

## Thank you for choosing Playcraft!

Global Merchants, Inc. 12 Lunar Drive Woodbridge, CT 06525